


718.292.9000 || Info@GAL.com www.GAL.com

## **GAL Universal Interlock Mounting Kit**

Designed for installing a GAL MOH or MOCPH Interlock System in Most Existing Hoistways

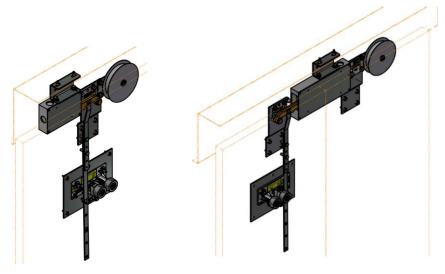

MOH Interlock MOCPH Interlock

# Installation Guide

Rev A

(intentionally left blank)

## Contents

Con	tents.		1
1.	Intro	duction	1
2.	Kit Li	mitations	2
3.	Gene	eral Installation and Setup	4
3	.1.	Preliminary Steps	4
3	.2.	Release Roller Mounting	4
3	.3.	Side Slide Doors - Keeper & Lock Box Mounting	6
3	.4.	Center Parting Doors – Keeper & Lock Box Mounting	8

## 1. Introduction

This kit is designed to allow for easy installation of GAL interlocks where there are existing non-GAL hatch hanger assemblies. It provides all necessary hardware for installation.

Note: These kits provide a <u>General</u> mounting solution for <u>GAL</u> components. It is not designed to mount other manufactures' interlock. GAL interlocks are designed to ONLY work with GAL clutches.

This kit is not appropriate for certain door openings outlined in the next section.

## 2. Kit Limitations

If the following conditions aren't met please contact GAL. Custom prints may be required and in extreme cases this kit may not be appropriate.

- Car and Hatch doors must be the same height
- Door height exceeds 87"

Door Style	Opening Width	Max. Header Pocket Height	Min. Header Pocket Depth*	Additional Document
Single Speed	22" – 60"	8 5/16"	3 11/16"	7878-201
Two Speed	30" – 60"	8 5/16"	5 11/16"	7878-202
Center Part	30" – 59"	8 5/16"	3 11/16"	7878-203

\*Assumed door thickness is  $1 \frac{1}{2}$ ". Otherwise  $2 \frac{1}{2}$ " space is required from the face of the door.

Kit	Includes Reel Closer	SS	2SP	СР
KIT00-0201L/R	Yes	Yes	Yes*	No
KIT00-0202L/R	No	Yes	Yes	No
KIT00-0203N	Yes	No	No	Yes
KIT00-0204N	No	No	No	Yes

\* If an existing way of relating the fast and slow doors is being retained, this kit can be used.

#### 2.1. Single Speed Spring Closers

\*\*\*To order reel closers see KIT00-0201L/R. Closers are NOT part

of KIT00-202L/R. To use Spring Closers see chart below.\*\*\*

GAL P/N	GAL Part Desc.
CL5-0001L/R	CLOSER, SS 22-27 DO
CL5-0002L/R	CLOSER, SS 28-35 DO
CL5-0003L/R	CLOSER, SS 36-40 DO
CL5-0004L/R	CLOSER, SS 41-44 DO
CL5-0005L/R	CLOSER, SS 45-48 DO

## 2.2. Two Speed Spring Closers

\*\*\* To relate fast and slow doors, GAL sells Spring Closers that are opening specific. Closers are NOT provided as part of KIT00-0202L/R. See chart below if you wish to add closers to your

oracii			
GAL P/N	GAL Part Desc.		
CL5-0006L/R	CLOSER 2S 24 DO		
CL5-0007L/R	CLOSER 2S 25 DO		
CL5-0009L/R	CLOSER 2S 26-27 DO		
CL5-0011L/R	CLOSER 2S 28-35 DO		
CL5-0012L/R	CLOSER 2S 36-40 DO		
CL5-0013L/R	CLOSER 2S 41-44 DO		
CL5-0014L/R	CLOSER 2S 45-48 DO		
CL5-0015L/R	CLOSER 2S 49-51 DO		
CL5-0016L/R	CLOSER 2S 52-54 DO		
CL5-0017L/R	CLOSER 2S 55-60 DO		

order. \*\*\*

## 2.3. Center Parting Spring Closers

\*\*\* To order reel closers see KIT00-0203N. Closers are NOT provided as part of KIT00-0204N. To use Spring Closers see chart below.

GAL P/N	GAL Part Desc.
CL5-0001R	CLOSER, CP 24-55 DO
CL5-0002R	CLOSER, CP 56-71 DO

## 3. General Installation and Setup

## 3.1. Preliminary Steps


- Remove the car from service, in compliance with standard safety policies.
- Gain access to the hatch side equipment and remove existing interlocks.
- See drawings 7878-SS, 7878-2S, or 7878-CP for specific dimensions and a more detailed view of the final assembly.

## 3.2. Release Roller Mounting

• Determine if the reinforcement plate is required for installation.

## 3.2.1. Mounting w/o the Reinforcement Plate

- Locate the mounting holes for the release rollers. Mark the location.
  - Refer to drawing 7878-SS for Single Speed
  - Refer to drawing 7878-2S for Two Speed
- Use 2 self-drilling ¼ screws to secure the roller assembly to the door.
- OPTIONAL:
  - The Roller can be pinned with an additional #10 self-

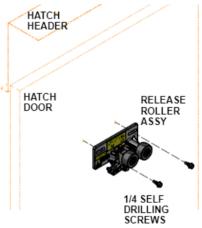


drilling screw to ensure that it cannot move.




#### 3.2.2. Mounting with the Reinforcement Plate

- Locate where the interlock studs on the reinforcement plate should go. (The mounting for the roller assembly itself).
  - Refer to drawing 7878-SS for Single Speed
  - Refer to drawing 7878-2S for Two Speed
- Mark the 6 holes used to mount the reinforcement plate.
- Use 6 self-drilling #10 screws to secure the plate to the door.

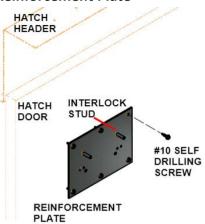

- Mount the release roller to the plate stud, securing it with the ¼-20 hardware provided.
- OPTIONAL:
  - The Roller can be pinned with an additional #10 self-drilling screw to ensure that it cannot move.

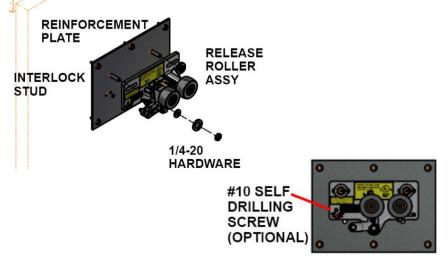



#### 3.3. Side Slide Doors - Keeper & Lock Box Mounting




INT2H-0204R/L

 - See 7878-SS & 7878-2S drawings for more precise illustrations and locations of below components.
- Locate the mounting holes for the keeper plate
  - The top hole should be 3 ½" from the top of the hatch header.
  - The 1<sup>st</sup> hole of the plate needs to be at least 8 ¼" from daylite to make sure there is enough room for the lock box.
- RH SHOWN LH OPPOSITE
  - Use 2 self drilling ¼" screws to secure the plate.
    - Note: If unsure of the final location of the keeper, only use the top 2 slots now and all 4 screws at the end.
  - Secure the keeper and reel closer (if KIT00-0201L/R is used) to the plate.

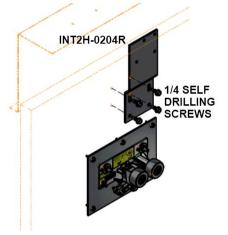






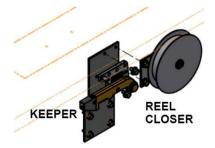

 
• Use 2 self drilling ¼" screws to mount the C channel (INT2H-0053N) to the top of the hatch header..







- Connect the upper and lower link. To pick the correct lower link:
  - B link:  $10 \le E \le 18$
  - D link:  $18 \le E \le 26$

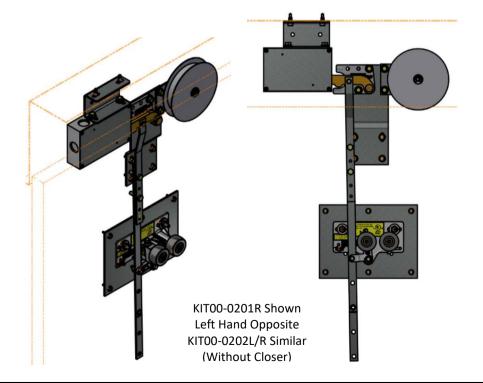


#### 3.4. Center Parting Doors – Keeper & Lock Box Mounting

Locate the mounting holes for the keeper plate on the left-hand door. CL OF MO (left door) keeper 0 OPENING plate – INT2H-0052N. See drawing 7878-CP 0 for precise location. 1/4 SELF Use 4 self drilling ¼" screws INT2H-0052N DRILLING to secure the plate. SCREWS Note: If unsure of the 0 final location of the keeper, only use the top 2 slots now and all 4 screws at the end. Secure the keeper to the plate. CL OF Use 2 self drilling ¼" screws to OPENING mount the C channel (INT2H-0053N) to the top of the hatch header. Mount the lock box to the C -• channel 00 CL OF OPENING CL OF OPENING


8

Locate the mounting holes for the right-hand door keeper plate. INT2H-0204R

- o Similar installation procedure to the left-hand door
- Note new distance from CL

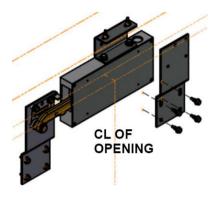

- Secure the stationary keeper and reel closer to the plate.
- Refer to 7878-CP for more specific dimensions.
- Connect the upper and lower link. To pick the correct lower link:
  - B link:  $10 \le E \le 18$
  - D link: 18 ≤ E ≤ 26

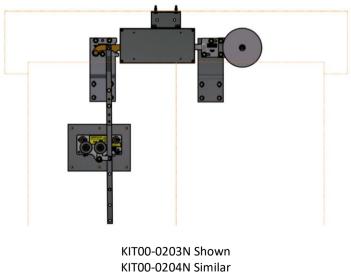

(Without Closer)