




A **VANTAGE** Company

# GLR-Series Gearless Machine Instruction Manual (#1198)

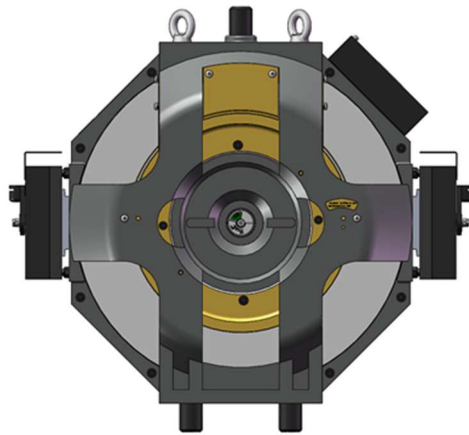

© Hollister-Whitney Elevator Co. LLC

#1 Hollister-Whitney Parkway

Quincy, IL 62305

Phone 217.222.0466 • Fax 217.222.0493

4/15/2026



Scan the QR code above or visit <https://www.vantageelevation.com/document-library/> to find the latest revision of this manual.



This installation and service manual is intended for the use of qualified and authorized elevator personnel ONLY. For your safety and the safety of others, do not attempt ANY procedure that you are not qualified and authorized to perform. Recommended procedures must be done in accordance with the applicable rules of the latest edition of the National Electrical Code; the latest edition of ASME A17.1, and all governing local codes. Every attempt has been made to ensure that this guide is accurate and up to date. Hollister-Whitney Elevator Co. LLC assumes no liability for consequences resulting from any error or omission. Please notify Hollister-Whitney Elevator Co. LLC regarding any difficulties with this guide.

## Contents

1	Introduction.....	1-1
1.1	Description.....	1-1
1.2	Warranty Information .....	1-1
2	Safety Precautions .....	2-1
2.1	Terms in This Manual .....	2-1
2.2	General Safety.....	2-1
2.3	Electrical Safety .....	2-1
2.4	Electrical Hazards.....	2-2
2.5	Mainline Disconnect.....	2-2
2.6	Test Equipment Safety.....	2-2
2.7	When Power Is On.....	2-2
2.8	Product Specific Warnings.....	2-2
3	Arrival of the Equipment .....	3-1
3.1	Receiving .....	3-1
3.2	Data Tag.....	3-1
3.3	Handling.....	3-1
3.4	Hoisting.....	3-2
3.5	Storage .....	3-3
3.6	Moisture, Condensation .....	3-3
4	Application.....	4-1
4.1	Overview.....	4-1
4.2	Codes and Standards .....	4-2
4.3	Environmental Specifications.....	4-2
4.4	Machine Specifications .....	4-2
4.5	Brake Specifications .....	4-5
5	Installation .....	5-1
5.1	Machine Mounting.....	5-1
5.2	Electrical Connection .....	5-4

5.3	Brake Adjustment.....	5-6
5.4	Brake Burnishing.....	5-10
5.5	Encoder Connection .....	5-10
5.6	Startup .....	5-10
5.7	Manual Brake Release.....	5-11
6	Maintenance .....	6-1
6.1	General .....	6-1
6.2	Cleaning.....	6-1
6.3	Bearings.....	6-2
6.4	Brake Wear .....	6-2
6.5	Other Items .....	6-3
7	Replacement .....	7-1
7.1	Encoder Replacement .....	7-1
7.2	Brake Replacement .....	7-7

# Section

# 1

## **1 Introduction**

### **1.1 Description**

Thank you for choosing the Hollister Whitney Elevator Company (HWEC) GLR Gearless Machine.

The GLR series machines have been designed for use in 2:1 roped, machine-room-less (MRL) applications with VVVF controls. The machine is designed with 30 poles to provide smooth, quiet, and long-lasting operation.

HWEC machines are designed to perform in a tolerant machine space. The machine space working temperature should be held between 35° F & 104° F, (1.7° C & 40° C) and humidity should be held to an average of 90% non-condensing.

### **1.2 Warranty Information**

All parts and equipment manufactured by HWEC are guaranteed against defects in material and workmanship for a period of five (5) years from the date of shipment.

The HWEC warranty covers only the repair or replacement of parts, F.O.B. our factory, upon determination by inspection at our factory that warranty is applicable.

Equipment and components not of our manufacture are warranted only to the extent of the original manufacturer's warranty.

Our warranty specifically does not include any other incidental liability or expense such as transportation, labor, and unauthorized repairs.

## Section

# 2

## 2 Safety Precautions

Read this section before any work is performed on elevator equipment.

### **\* IMPORTANT –**

**The procedures contained in this manual are intended for the use of qualified elevator personnel. In the interest of your personal safety and the safety of others, do NOT attempt ANY procedure that you are NOT qualified to perform.**

All procedures must be done in accordance with the applicable rules in the latest edition of the National Electrical Code; the latest edition of ASME A17.1; and any governing local codes.

### 2.1 Terms in This Manual

#### **CAUTION:**

**Caution statements identify conditions that could result in damage to the equipment or other property if improper procedures are followed!**

#### **WARNING:**

**Warning statements identify conditions that could result in personal injury if improper procedures are followed!**

### 2.2 General Safety

Specific warnings and cautions are found where they apply, and DO NOT appear in this summary.

### 2.3 Electrical Safety

All wiring must be in accordance with the National Electrical Code and must be consistent with all state and local codes.

## 2.4 Electrical Hazards

Electric shocks can cause personal injury or loss of life. Circuit breakers, switches and fuses may NOT disconnect all power to the equipment. Always refer to the wiring diagrams. Whether the A/C supply is grounded or not, high voltage will be present at many points.

## 2.5 Mainline Disconnect

Unless otherwise suggested, always turn OFF. Lock and tag out the mainline disconnect to remove power from the equipment.

## 2.6 Test Equipment Safety

Always refer to the manufacturer's instruction book for proper test equipment operation and adjustments.

Megger testing, or buzzer type continuity testers, can damage electronic components. Connection of devices such as voltmeters on certain low-level analog circuits may degrade electronic system performance. Always use a voltmeter with a minimum impedance of 1M Ohm/Volt. A digital voltmeter is recommended.

## 2.7 When Power Is On

Dangerous voltages exist at several points in some products. To avoid personal injury, do NOT touch exposed electrical connections or components while power is On.

## 2.8 Product Specific Warnings

### **WARNING**

**The GLR series machine MUST be balanced during hoisting. See section 3.4 for proper lifting configurations.**

### **WARNING**

**Hang the elevator car before removing ANY bolts. Failure to do so may result in severe injury and equipment damage.**

# Section

# 3

## 3 Arrival of the Equipment

### 3.1 Receiving

Immediately upon arrival of the machine, make a visual check for any external damage. If any damage incurred in transit is found, make notice of the claim in the presence of the carrier, and notify HWEC. If necessary, do not put these machines into operation without first consulting HWEC.

If the machine has gotten wet during transportation, make notice of the claim in the presence of the carrier and notify HWEC. See also Section 3.6.

### 3.2 Data Tag

Check the machine data tag to ensure the machine conforms to your order.

Hallister-Whitney A VANTAGE Company		PMAC ELEVATOR TRACTION MACHINE RATINGS		CSA B44.1 ASME A17.5	155941 C US
MODEL	SUSPENSION	POWER (hp/KW)	MAX. AMBIENT TEMP (°C)		40
CONTRACT/SERIAL NO.	NUMBER OF POLES 30	FREQUENCY (Hz)	INSULATION CLASS		F
CAR SPEED (fpm)	TORQUE (ft-lbs)	VOLTS (V) / PHASES	ELEVATOR DUTY (%)		50
CAR CAPACITY (lbs)	ROTATIONAL SPEED (rpm)	CURRENT (A)	MACHINE WEIGHT (lbs)		

Figure 1 – Data Tag

### 3.3 Handling

The machine will be delivered on a wooden pallet. It can be left on the pallet and moved with a standard fork truck or pallet jack.

### 3.4 Hoisting

Machine Weight		
Model	Weight (in lbs)	Weight (in kg)
GLR-25S2	1056	480
GLR-35S2	1400	635

Table 1 – Machine Weight

See table 1 for the machine weight. When removing the machine from the pallet, it must be lifted using the lifting eye bolts provided at the top of the machine.

When lifting the machine, use a spreader beam or other suitable rigging device to pull the lifting eye bolts directly upward.

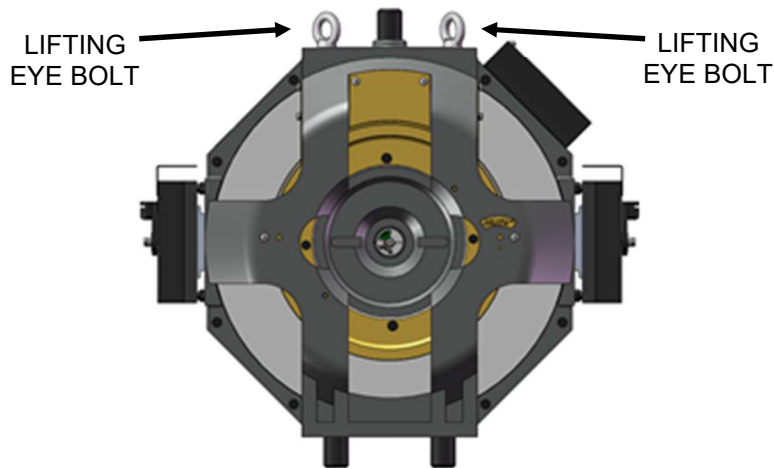


Figure 2 – Proper Lifting

## **WARNING**

**Use only the lifting eye bolts when lifting the machine! Do not use any other machine component to lift the machine! Lifting the machine by any other component will result in damage to the machine or possible failure of the component resulting in the machine falling from the hoisting system!**

**Follow all the necessary precautions to avoid damage to the machine or risk to personnel when moving or hoisting the machine.**

### **3.5 Storage**

During storage in a warehouse or on the elevator job site, precautions must be taken to protect the machine from dust, dirt, moisture, metal shavings and temperature extremes.

For short term storage, place the machine in a warm, dry, and clean environment.

Protect the machine from harsh weather conditions and temperature variations that can lead to condensation.

Protect from dust and metal shavings. Metal dust and shavings can be attracted into the machine by the magnets.

For longer term storage, follow the recommendations above plus; place the machine in a sealed, waterproof enclosure. Add a dehydrating packet that is sized for the enclosure's volume and humidity level.

### **3.6 Moisture, Condensation**

Before installing the machine, and before any voltage is applied, check the machine for condensation, or any evidence of moisture or water. If any evidence of wetness is found, contact HWEC for drying instructions.

After the machine has been dried per factory instructions, it will be necessary to verify the insulation between each coil phase and earth ground. Using an insulation tester (or megohmmeter) check the insulation resistance at 500VDC. The resistance should be NO LESS than 100Mohm.

## Section

# 4

## 4 Application

### 4.1 Overview

The GLR series machines are synchronous permanent magnet gearless machine designed for elevators. The machine has 30 poles to provide smooth, quiet, and long-lasting operation. Its configuration is designed for 2:1 roping, single wrap arrangement with 50% counterbalance. See Section 4.4 for complete specifications. The machine shaft load is calculated using following formula:

**(Empty Car Weight + Counterbalance Weight + Capacity + Hoist Rope Weight + Compensation Weight + Traveling Cable Weight) / 2**

The GLR series machine brake system is equipped with two block brakes.

The latest HWEC manuals, bulletins and procedures are available for download from the HWEC website.

The following is a list of major components of the GLR series machines. Along with a description of their functions, there is an overview of some of the critical adjustments and maintenance information. See the Installation and Maintenance chapters for more details.

1. **PM Motor Housing** - The housing contains the PM windings used to provide the necessary torque and speed to move the elevator in operation.
2. **Traction Sheave** – A grooved sheave is connected directly to the machine rotor. The grooves provide traction between the sheave and the hoist ropes.
3. **Brakes** – The electromechanical device is used to prevent the elevator from moving when the car is at rest.
4. **Sheave Guard/Rope Retainer** – Provides rope retention and keeps hoist ropes away from contact after rope installation.
5. **Machine Rotor & Brake Wheel** – The brake wheel is connected to the main shaft. When the brake is energized, the brake is released from the brake wheel.
6. **Nameplate** - Displays the machine rated data, model, and serial number.
7. **Encoder** – This device is directly coupled to the rotor of the machine. It is provided to give the absolute speed feedback of the hoist motor to the inverter drive system and to the elevator controller.

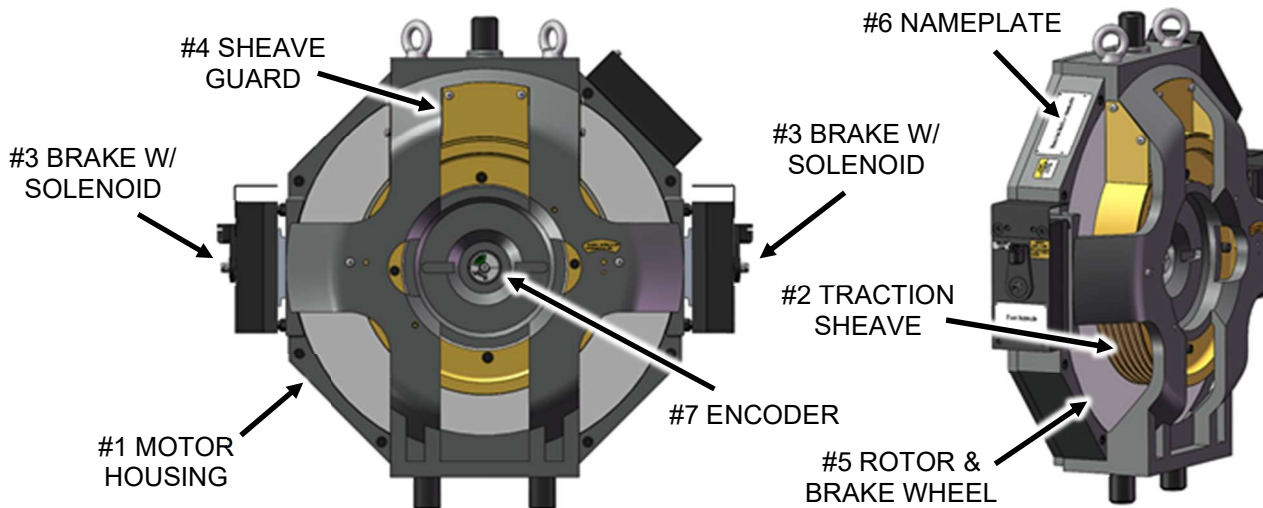


Figure 3 – Machine Components

## 4.2 Codes and Standards

These machines are designed to comply with ASME A17.1/CSA B44 code. The motors are designed with insulation class F minimum and have been approved by and carry a CSA approved label.

## 4.3 Environmental Specifications

- Operating ambient temperature: 35° F to 104° F (1.7 C to 40 C)
- Humidity average of 90% non-condensing

## 4.4 Machine Specifications

Machine Specifications			
Model	Sheave Diameter (mm)	Rope Diameter (mm)	Shaft Load (lbs.)
GLR-25S2	420mm / 480mm	8mm / 10mm	9000 lbs.
GLR-35S2	520mm	8mm / 10mm	9,600 lbs.

Table 2 – Machine Specifications

- Main and emergency block brakes. Each capable of holding 125% of the load.
- Brake switches are wired normally closed as standard.
- Heidenhain ECN1313 2048 encoder and 1.5-meter-long cable (standard).
- Sheave guard/rope retainer.
- Machine dimensions, and parts list can be found at the end of this manual.

**BULLETIN GLR SERIES GEARLESS TRACTION MACHINE**

Part Number	Sheave Dia (mm)	Voltage (AC)	Current (Amps)	Capacity 2:1 @ 50% CB		System Load*		Car Speed		RPM	Power		Torque	
				lbs	kg.	lbs	kg	ft/min	m/sec		HP	kW	ft/lbs	Nm
GLR-25S2-A-R401	420	480	6.1	1500	680	18,000	8,165	150	0.76	69.3	4.6	3.4	350	474
			8.2	2000	906						6.1	4.6	465	630
			10.2	2500	1133						7.7	5.7	580	785
GLR-25S2-A-R402	420	480	8.0	1500	680	18,000	8,165	200	1.02	92.4	6.2	4.6	350	474
			10.5	2000	906						8.2	6.1	465	630
			13.2	2500	1133						10.2	7.6	580	785
GLR-25S2-A-R403	420	480	13.8	1500	680	18,000	8,165	350	1.78	161.7	10.8	8.0	350	474
			18.4	2000	906						14.3	10.7	465	630
			23.0	2500	1133						17.9	13.3	580	785
GLR-25S2-A-R201	420	208	13.9	1500	680	18,000	8,165	150	0.76	69.3	4.6	3.4	350	474
			18.5	2000	906						6.1	4.6	465	630
			23.1	2500	1133						7.7	5.7	580	785
GLR-25S2-A-R202	420	208	18.5	1500	680	18,000	8,165	200	1.02	92.4	6.2	4.6	350	474
			24.7	2000	906						8.2	6.1	465	630
			30.8	2500	1133						10.2	7.6	580	785
GLR-25S2-A-R203	420	208	32.2	1500	680	18,000	8,165	350	1.78	161.7	10.8	8.0	350	474
			42.6	2000	906						14.3	10.7	465	630
			53.3	2500	1133						17.9	13.3	580	785
GLR-25S2-B-R404	480	480	6.3	1500	680	18,000	8,165	150	0.76	60.6	4.6	3.4	400	542
			8.4	2000	906						6.1	4.6	530	718
			10.6	2500	1133						7.7	5.7	665	900
GLR-25S2-B-R405	480	480	8.2	1500	680	18,000	8,165	200	1.02	80.9	6.2	4.6	400	542
			10.9	2000	906						8.2	6.1	530	718
			13.7	2500	1133						10.2	7.6	665	900
GLR-25S2-B-R406	480	480	13.9	1500	680	18,000	8,165	350	1.78	141.5	10.8	8.0	400	542
			18.5	2000	906						14.3	10.6	530	718
			23.2	2500	1133						17.9	13.4	665	900
GLR-25S2-B-R204	480	208	14.8	1500	680	18,000	8,165	150	0.76	60.6	4.6	3.4	400	542
			19.7	2000	906						6.1	4.6	530	718
			24.7	2500	1133						7.7	5.7	665	900
GLR-25S2-B-R205	480	208	20.0	1500	680	18,000	8,165	200	1.02	80.9	6.2	4.6	400	542
			26.3	2000	906						8.2	6.1	530	718
			33.0	2500	1133						10.2	7.6	665	900
GLR-25S2-B-R206	480	208	34.3	1500	680	18,000	8,165	350	1.78	141.5	10.8	8.0	400	542
			45.8	2000	906						14.3	10.6	530	718
			57.2	2500	1133						17.9	13.4	665	900

**Table 3 – Maximum GLR-25S2 Detailed Specifications**

Part Number	Sheave Dia (mm)	Voltage (AC)	Current (Amps)	Capacity 2:1 @ 50% CB		System Load*		Car Speed		RPM	Power		Torque	
				lbs	kg.	lbs	kg	ft/min	m/sec		HP	kW	ft/lbs	Nm
GLR-35S2-C-R401	520	480	11.2	3000	1361	24,200	10,977	150	0.76	56.0	7.8	5.81	731	991
			13.2	3500	1588						9.1	6.81	856	1161
GLR-35S2-C-R402	520	480	14.2	3000	1361	24,200	10,977	200	1.02	75.0	10.4	7.78	730	990
			16.6	3500	1588						12.2	9.12	856	1161
GLR-35S2-C-R403	520	480	24.4	3000	1361	24,200	10,977	350	1.78	131.0	18.2	13.58	730	990
			28.4	3500	1588						21.4	15.93	856	1161
GLR-35S2-C-R201	520	208	25.4	3000	1361	24,200	10,977	150	0.76	56.0	7.8	5.81	731	991
			29.5	3500	1588						9.1	6.81	856	1161
GLR-35S2-C-R202	520	208	32.4	3000	1361	24,200	10,977	200	1.02	75.0	10.4	7.78	730	990
			38.5	3500	1588						12.2	9.12	856	1161
GLR-35S2-C-R203	520	208	55.8	3000	1361	24,200	10,977	350	1.78	131.0	18.2	13.58	730	990
			65.0	3500	1588						21.4	15.93	856	1161

**Table 4 – Maximum GLR-35S2 Detailed Specifications**

## 4.5 Brake Specifications

Brake Specifications				
Model	Pick Voltage (V)	Pick Current (A)	Hold Voltage (V)	Hold Current (A)
GLR-25S2	110	1.32	70	0.84
GLR-35S2	110	1.98	70	1.26

Table 5 – Brake Specifications

- Two brakes are supplied standard from the factory.
- The opening voltage of the brake is not more than 110 V, the releasing voltage is not more than 70 V, and the control range is 15 V-30 V.
- The machine brakes are mounted in two locations.

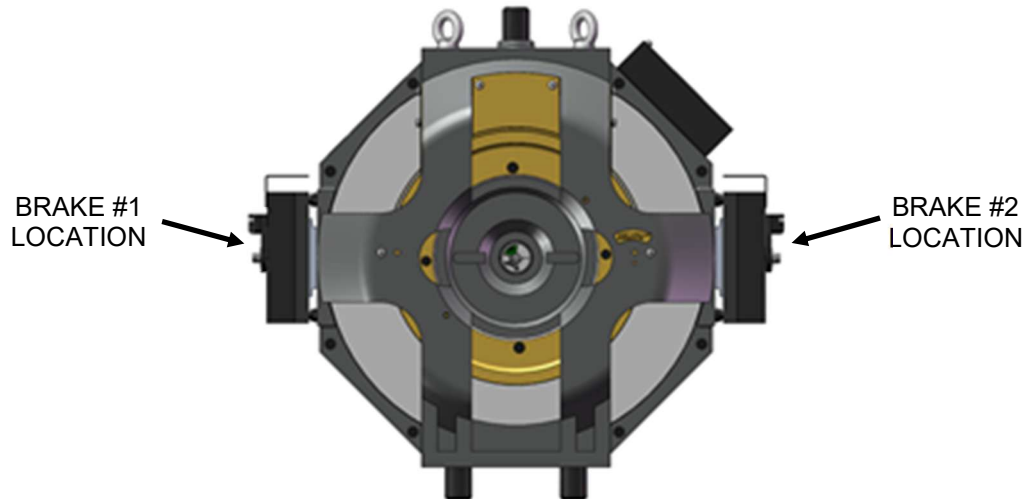


Figure 4 – Brake Locations

# Section

# 5

## 5 Installation

### 5.1 Machine Mounting


Before hoisting the machine into place, verify all the hoisting equipment is rated for the weight of the machine. See Section 3.4.

Provide a level, structurally supported (rated for the load on the machine) machine space with proper clearance around the machine for maintenance and adjustments.

This machine is intended to be mounted in traditional overhead applications with down-pull forces on the traction sheave.

#### 5.1.1 Rail Mounting

Figure 5 shows the mounting components. The machine is supported by two brackets that are attached to the back of the rail guide.

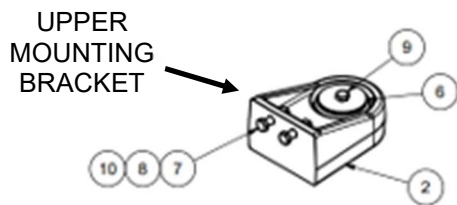

PARTS LIST		
ITEM	QTY	DESCRIPTION
1	1	LOWER MOUNTING BRACKET
2	1	UPPER MOUNTING BRACKET
3	1	PAD, ISOLATION
4	4	BOLT LOCKING PLATE
5	3	CYLINDRICAL ISOLATION BUSHING
6	3	PLATE WASHER, OVERSIZED
7	1	THREAD LOCKER, 243
8	5	ZINC-PLATED LOCK WASHER, DIN 127B
9	10	M12 X 1.75 X 50, STEEL HEX HEAD SCREW, DIN 933
10	3	M12 X 1.75 X 110, STEEL HEX HEAD SCREW, DIN 931
11	2	M12 X 1.75, STEEL HEX NUT, DIN 934

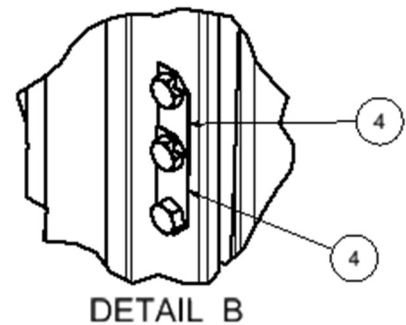
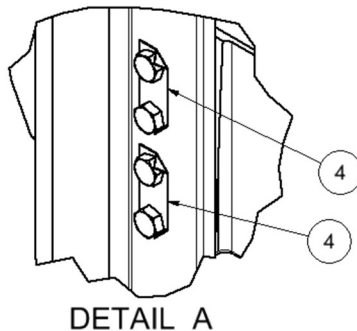
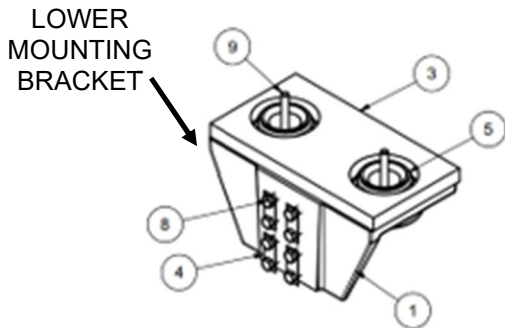


Figure 5 – Mounting Components

**Mounting Procedure:** Fasten the lower mounting bracket to the back of the rail using the M12 x 1.75 x 50 bolts, thread locking fluid and the bolt locking plates provided. Tighten the bolts to 55 ft-lbs of torque. After the bolts have been properly torqued, bend the bolt locking plates into place, as shown in detail A (GLR-25S2) and detail B (GLR-35S2) of Figure 5, preventing the bolts from loosening. Once the lower mounting bracket is securely fastened to the back of the rail, place the isolation pad onto the top of the lower mounting bracket, aligning the holes in the isolation pad with the holes on top of the lower mounting bracket.

Using the M12 x 1.75 x 110 bolts, lock washers, oversized plate washers, and thread locking fluid, fasten the three cylindrical isolation bushings to the machine mounting pins. There are two pins on the bottom of the machine and one pin on top of the machine.

Hoist the machine over the lower mounting bracket and carefully lower the machine down onto the lower mounting bracket, pinning the isolation pad between the machine and lower mounting bracket.

Once the machine is in position on the lower mounting bracket, the upper mounting bracket can be attached. Lower the upper mounting bracket onto the cylindrical isolation bushing at the top of the machine and fastened to the back of the rail using the M12 x 1.75 x 50 bolts, lock washers, M12 x 1.75 hex nuts, and thread locking fluid.

The mounting brackets are pre-drilled and tapped to accommodate the hole spacings shown in Figure 6 (GLR-25S2) & Figure 7 (GLR-35S2). An exploded view of the brackets and isolation components are shown in Figure 8.

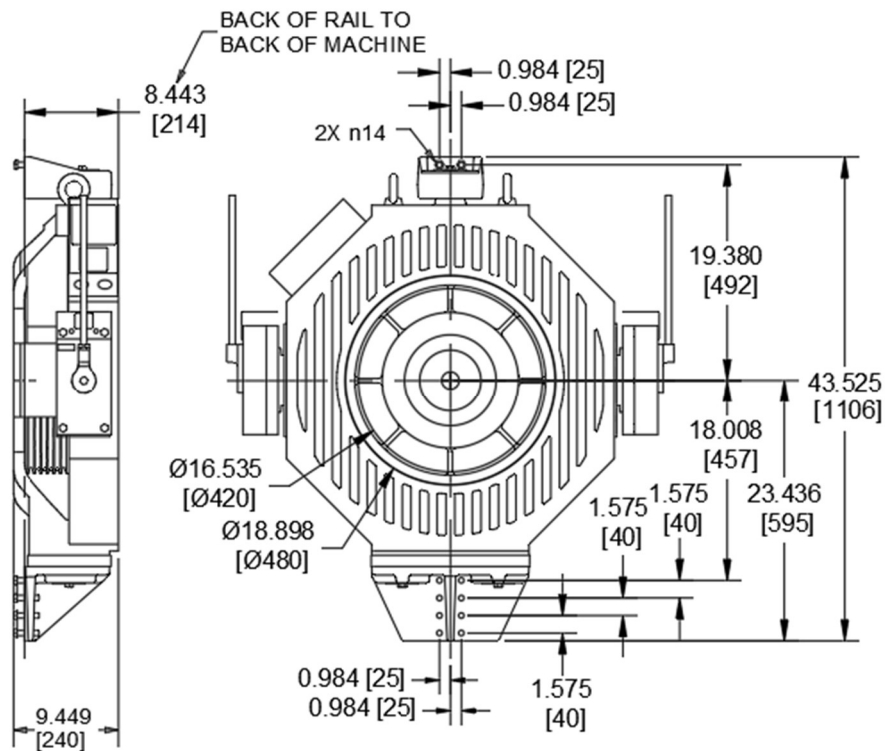


Figure 6 GLR-25S2 Mounting hole Dimensions

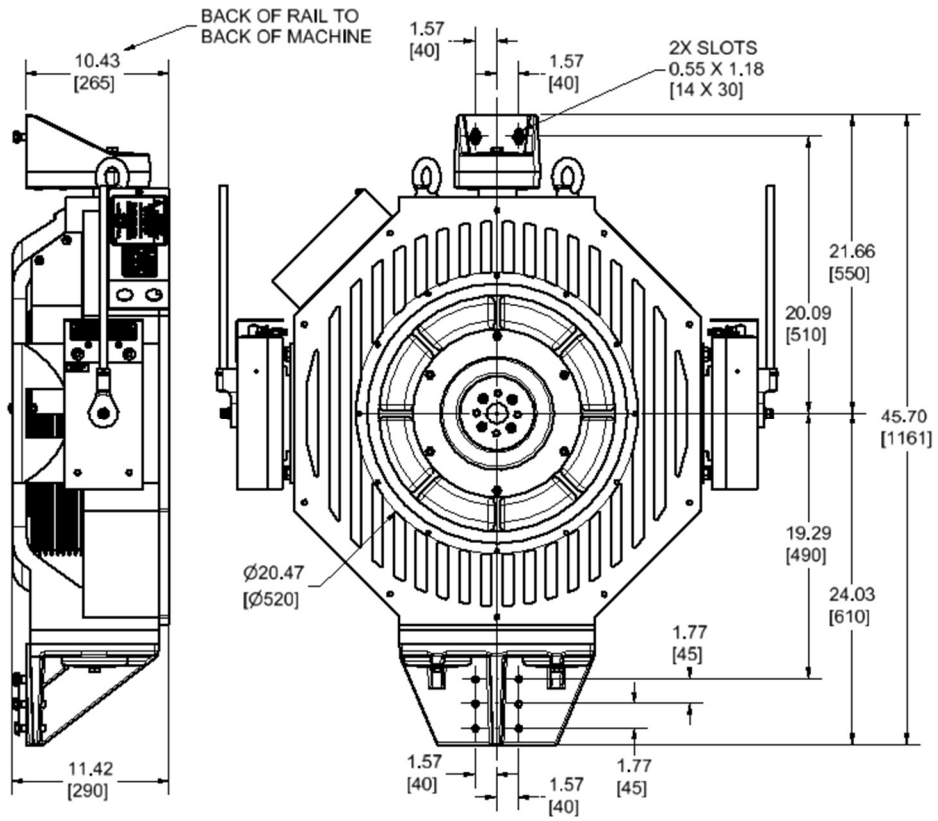


Figure 7 – GLR-35S2 Mounting hole dimensions

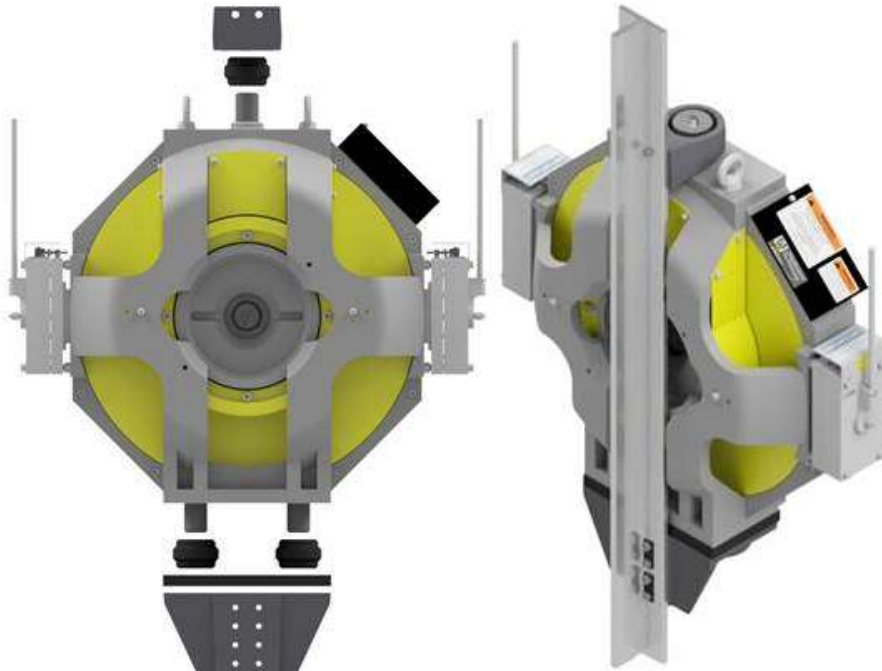


Figure 8 – Machine Mounting

## 5.2 Electrical Connection

Use the project wiring diagrams (with the motor configuration information) to connect the motor to the controller.

### **⚠ WARNING**

**Before performing any electrical connections, make sure that the power supply is turned off. Only then proceed with connecting electrical leads to power supply. Never work in machine electrical enclosure while power supply is on!**

**Direct connection to the three-phase power is forbidden, it may destroy the motor.**

### 5.2.1 Machine Wiring

- The Thermal Protection Switch (TPS) is wired with leads labeled and supplied into the machine electrical enclosure. Refer to Figure 9 – Machine Wiring.
- Consult your controller manufacturer for appropriate TPS connections.
- Verify the electrical supply from the elevator drive and brake power supplies match the machine data tag. Refer to Figure 1.
- Connect the U-V-W lines from the drive as shown.
- Earth Ground connects to the ground lug terminal inside the electrical enclosure.

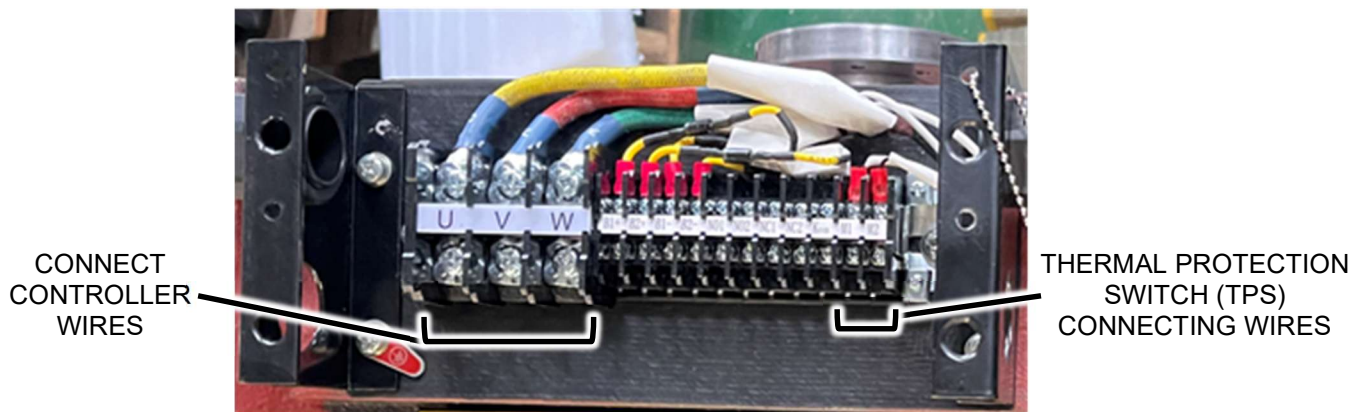


Figure 9 – Machine Wiring

**Note - Check and tighten all leads (motor side and line side) on installation.**

## **! WARNING**

**THE MACHINE AND EMERGENCY BRAKE COILS MUST BE INDEPENDENT!**

**IT IS THE RESPONSIBILITY OF THE USER TO CONNECT THE MOTOR IN ACCORDANCE WITH THE CURRENT LEGISLATION AND REGULATIONS IN THE COUNTRY OF USE. THIS IS PARTICULARLY IMPORTANT IN REGARD TO WIRE SIZES USED TO CONNECT THE POWER AND EARTH GROUND AND THE TYPE AND SIZE OF FUSES.**

### **5.2.2 Brake Wiring**

- Both main brake and emergency brake are designed to work at 50% duty cycle. As a result, both brakes should work in the same cycle, it is not allowed to keep emergency brake energized continuously.
- At each running cycle, it is suggested to set the emergency brake close after 0.5s-1s of main brake close. Both brakes should open at the same time
- Connect the machine brake and emergency brake as shown in Figure 10 – Brake Wiring.
- The brake switches are wired “normally closed” from the factory.

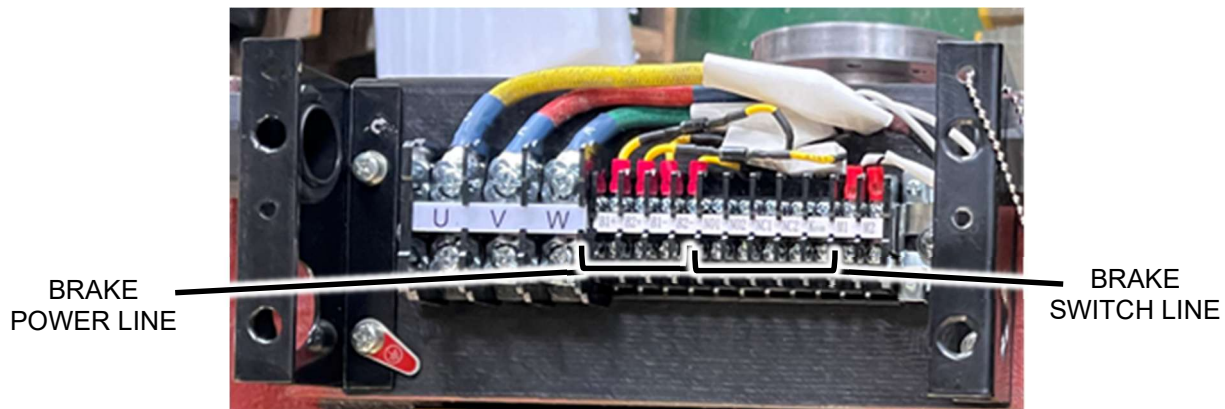


Figure 10 – Brake Wiring

## **! WARNING**

- Brake coils are designed to be de-energized during each elevator stop.
- Verify brake voltage with a meter at the machine.
- 110 VDC excitation voltage for 3 seconds.
- 70 VDC “hold” voltage.

## 5.3 Brake Adjustment

### **WARNING**

**Before performing any maintenance on the machine brakes, take all necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!**

### **WARNING**

**Brakes must be adjusted after the car and counterweight are suspended by the machine!**

**As brake pads are worn or new pads are installed readjustment is required.**

**Read all of section 5.3 prior to adjusting brake!**

#### 5.3.1 Required Tools

- TORQUE WRENCH (45 FT-LBS)
- 16MM SOCKET
- 21MM OPEN END WRENCH
- 0.012" (0.30MM) FEELER GUAGE (USED AS GO)
- 0.016" (0.40MM) FEELER GUAGE (USED AS NO-GO)
- 0.022" (0.55MM) FEELER GUAGE (MAX AIR GAP CHECK)

#### 5.3.2 Air gap (See Figure 11 through Figure 14)

The air gap of the brake is the space between the brake body and the moveable shoe plate (shown in Figure 11). This gap must be checked to ensure proper operation of the brake. The correct air gap is between 0.012" (0.30 mm) to 0.022" (0.55 mm). It is preferable to keep the gap close to minimum < 0.016" (0.40 mm).



Figure 11



Figure 12



Figure 13



Figure 14

### 5.3.2.1 Air gap adjustment

An initial air gap check is to take place after the block brake has been properly installed and fixed bolts torqued to 45 ft-lb. (car and counterweight suspended by machine).

1. Using a 16 mm wrench, loosen the four fixed bolts. See Figure 12.
2. Using a torque wrench and 16 mm socket, torque the fixed bolts in an “X” pattern to 45 ft-lb (60 N-m) See Figure 12.
3. Confirm the air gap using a 0.012” (0.30 mm) and 0.016” (0.40 mm) go no-go feeler gauge to check the air gap at all four corners. The 0.012 (0.030 mm) go should feeler gauge should fit and the 0.016” (0.40 mm) should not fit. If this is the case, no adjustment is necessary. See Figure 11.

### 5.3.2.2 When the air gap of brake is more than 0.016” (0.40 mm), please do as follows:

1. Loosen one of the 4 fixed bolts with a 16 mm wrench. See Figure 12.
2. Use a 21 mm wrench, rotate the adjustment bolt corresponding to the loosened fixed bolt in small increments, less than ½ a flat of the hex head, counterclockwise. See Figure 13.
3. Retorque the 16mm fixed bolts to 45 ft-lbs. (60 N-m) See Figure 12.
4. Confirm air gap is 0.012 (0.30mm) to 0.016” (0.40 mm) using a feeler gauge. See Figure 11. Repeat for 3 remaining bolts.

### 5.3.2.3 When the air gap of brake is less than 0.012” (0.30 mm) please do as follows:

1. Loosen one fixed bolt with a 16 mm wrench see Figure 12.
2. Turn the 21 mm adjustment bolt corresponding to the loosened fixed bolt clockwise in small increments, less than ½ turn of the hex head flat. See Figure 13.
3. Retorque 16 mm fixed bolts to 45 ft-lb (60 N-m). See Figure 12.
4. Confirm air gap is within 0.012” (0.30 mm) to 0.016” (0.40 mm) using a feeler gauge. See Figure 11.

### 5.3.3 Manual Brake Release “Arm Free play”

- Check “free travel” only after 5.3.1 Brake Air Gap has been completed.
- Manual release arm “free travel is factory set to 1/2” both directions. See Figure 15.
- Move Brake Arm without handle as shown below, while measuring the travel.
- If Adjustment is needed contact HOLLISTER WHITNEY ELEVATOR.



Figure 15

### 5.3.4 Verify Brake Function

When testing the brakes electrically energize them. Once brakes are adjusted run the car to verify the brakes are relatively quiet on stop and start. Verify no noticeable rubbing noise occurs during machine operation. Once adjustment is confirmed ensure dust guards are present to prevent dust buildup which can cause brake failure.

## 5.4 Brake Burnishing

### **WARNING**

#### **Brakes must be burnished to achieve full stopping torque!**

Each brake on the machine must be burnished separately. Repeat the following procedure for each brake.

1. Clamp the brake on the rotor. Ensure brake circuit is de-energized.
2. Run the elevator in the direction of the load at 11 RPM for 1 minute.
  - a. If the overall travel of the elevator will not allow the burnishing time to be met in one pass, open (energize) the brake at the bottom of the hoist way, lift the load back to the top, and repeat the run until the burnishing time is achieved.
  - b. Stop the elevator occasionally to ensure the brake and motor do not overheat.
3. After burnishing time is achieved re-verify the air gap between brake pads and rotor.
4. Ensure air gap is within 0.012" (0.30 mm) to 0.016" (0.40 mm) using a feeler gauge.

## 5.5 Encoder Connection

The machines are supplied with a Heidenhain ECN1313 2048 encoder. A 1.5-meter encoder cable is connected to the encoder and extends from the front of the machine.

Connect the supplied encoder cable to the encoder cable extending from the front of the machine.

When using a KEB drive, the encoder cable can be used "as-is."

When using any other manufacturer's drive, consult the controller manufacturer for cable compatibility and availability. DO NOT modify the KEB cable without first consulting the control manufacturer. Any modification of the KEB cable will void the warranty.

## 5.6 Startup

Verify all the motor related settings in the elevator controller match the information on the machine data tag. Refer to Figure 1 Data Tag.

Verify that all the brake parameters match the information on the machine data tag. Refer to Figure 1 Data Tag.

Follow the controller manufacturer's procedure for alignment of the magnets.

Briefly run the machine to verify the machine functionality and brake operates correctly.

Verify the drive sheave is plumb and aligned with the rope drop locations.

Install the hoist ropes, adjust the rope shackles, and check the ropes for equal tension. The rope tension must be uniform, or it may cause vibration and premature wear on the traction sheave and hoist ropes.

Re-verify that the traction sheave is plumb once the machine is fully loaded.

## 5.7 Manual Brake Release

The brakes can be manually released in the event the power is off.

**NOTE: The manual releasing device should be operated by 2 professionals, and make sure the power is shut down first.**

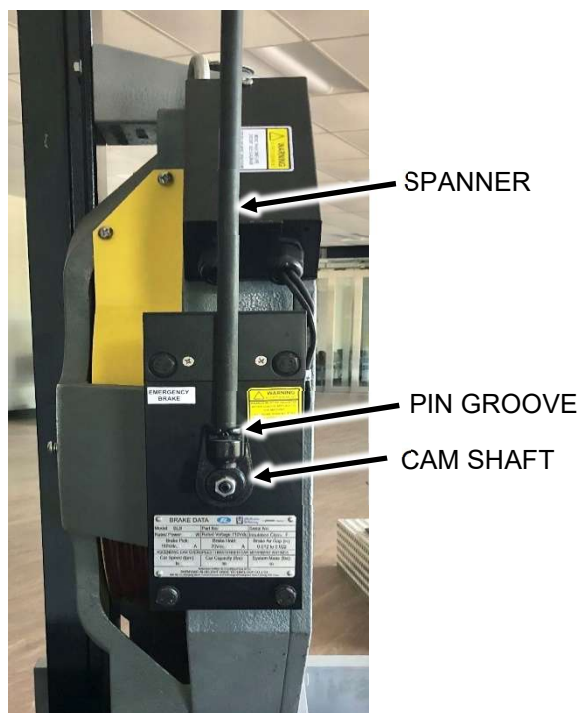


Figure 16

Insert the spanners into the cam release on top of each brake. Align the pin on the spanner with the mating groove on the cam release to prevent the spanner from slipping.

Apply force to the end of the spanner until the brake releases from the brake wheel.

The brake opening spanners must be removed from the cam release prior to normal elevator operation.

## Section

# 6

## 6 Maintenance

### **WARNING**

**Before performing any maintenance checks on equipment, take all the necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!**

### 6.1 General

To keep equipment functioning efficiently, good maintenance practices must be established, observed, and maintained. Systematic inspections of the equipment should be scheduled, and records kept of these inspections. Monitoring these records will indicate any sign of a potential issue.

Each installation has its own special conditions, so it is not possible for HVEC to outline an overall plan for periodic maintenance. HVEC would recommend, at a minimum, yearly inspections, but installation conditions may warrant a more frequent schedule. The maintenance contractor will need to make the final determination.

### 6.2 Cleaning

Dirt, dust, excess lubrication, and moisture are the greatest enemies of electrical equipment and of maintenance teams in general. Dirt and dust layers on a machine can prevent heat dissipation, which can lead to overheating and eventual insulation breakdown. Many types of dust in an elevator machine room are electrically conductive and can also lead to insulation failure. Dust and dirt can draw moisture to unpainted surfaces such as brake rods causing oxidation that can cause brake faults. Excess lubrication can draw dust and dirt as well.

Dust and dirt can be removed from surfaces with a dry, lint-free cloth, or with suction. With suction, however, care must be taken to not build up or discharge static electricity while cleaning. Dry, compressed air (at less than 50psi) may also be used to remove dirt and dust, however, this must be closely monitored as the compressed air will re-suspend the dust and dirt in the machine room atmosphere.

## 6.3 Bearings

GLR series machine uses sealed bearings, no need to maintain, no need to add grease.

Bearings L<sub>10</sub> calculated life rating (based on speed, loads and 50% duty) is approximately 20 years. Please note that installation conditions vary, so shorter or longer bearing life may be experienced.

## 6.4 Brake Wear

### **! WARNING**

**If the brake lining wears too much, the brake will be disabled.**

#### 6.4.1 Suggested check cycle

- Every 3 months after installation in the first 6 months.
- Every 1 year afterwards.

#### 6.4.2 Benchmark Criteria

- Keep a constant check, check for the brake flexibility, the braking pad and the traction sheave worn, and the bearings. Replace worn and damaged parts when necessary.
- When the braking pad is a little worn, it would add additional air gap, and make the braking noise much bigger. You may adjust it according to Section 5.3
- Assembly and Armature Disc. If brake wear is excessive replace the brake lining or replace the whole brake assembly. See Figure 17.



Figure 17

## 6.5 Other Items

The traction wheel, brake shoe and brake wheel are usually the only components that will be worn. Among them, the brake wheel is most unlikely to be worn. Brake pads are more likely to wear but can be monitored with feeler gauges. Refer to the brake section of this manual for brake inspection procedures.

The winding working temperature of traction machine shall not exceed 130 °C. It can be controlled by the thermal switch in the main machine. When the temperature reaches 130 °C, the traction machine shall be stopped.

When the traction machine rotates under the passive condition, it will be in the state of power generation. At this time, high voltage will be generated at the host terminal. Attention shall be paid to avoid electric shock and equipment damage.

Grease and other impurities shall be avoided between the brake pad and the brake wheel to avoid the decrease of braking force of the brake system. If the residual thickness of the brake pad is less than 5 mm due to wear, the brake pad shall be replaced.

Traction wheels are the most likely item on the machines to wear. Periodic measurements of rope depth and the evenness of wear for all ropes (groove depth should wear evenly) should be monitored. Cable should not be more than 0.125 inch (1/8") below the outer rim of the traction wheel.

Check machine guarding and rope retainers for clearance and attachment hardware for tightness. Adjust as necessary.

## Section

# 7

## 7 Replacement

### **WARNING**

**Have only qualified personnel perform the replacement work. The person who performs the replacement work must make sure that the machine power is off, and that the elevator will not move unexpectedly.**

### 7.1 Encoder Replacement

The encoder is located in a pocket directly behind the car rail.

Required Tools & Materials:

- Encoder (ECN 1313)
- Hex wrench
  - 2 mm
  - 4 mm
  - 6 mm
  - 8 mm
- Hex sockets
  - 2 mm
  - 4 mm
- Torque Wrench (Need to measure 9 in-lbs. and 44 in-lbs.)
- M10 bolt (at least 1" or 25 mm in length)

### 7.1.1 Encoder Removal

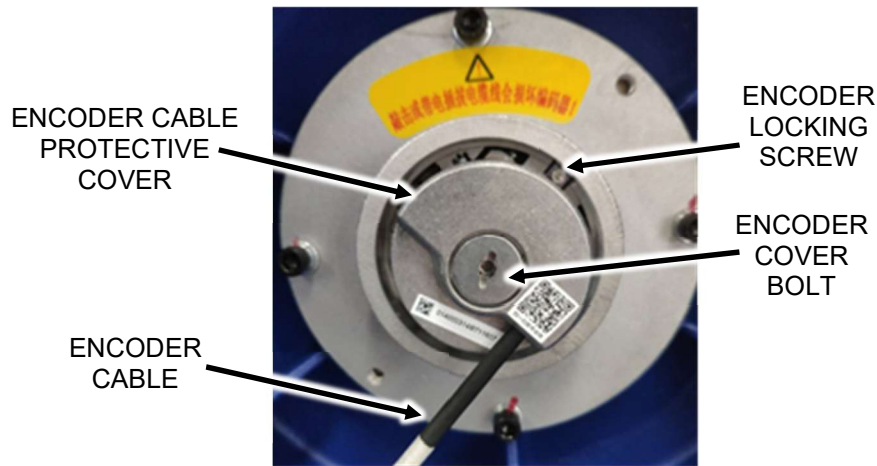


Figure 18

1. Remove the encoder cover bolt and the encoder cable protective cover using the hex wrench (4 mm). See Figure 19.



Figure 19

2. Carefully remove encoder cable, See Figure 20. **Note: Do not apply excessive pressure on the cable. It may destroy the encoder cable.**



Figure 20

3. Find the M2.5 encoder locking screw and loosen it using the hex wrench (2 mm). The screw does not need to be removed. See Figure 21.



Figure 21

4. Loosen the bolt M5 inside by hex wrench (4 mm) 2~3 turns only. Do not remove this bolt yet (**M5 bolt must remain in the encoder so the M10 bolt can push against it**). See Figure 22.



Figure 22

5. Insert an M10 bolt into the encoder housing. See Figure 23.



Figure 23

6. Turn the M10 bolt against the M5x50 bolt to push the encoder from the shaft. The encoder will “pop” free and will be loose to the touch yet still retained by the M5 bolt. See Figure 24.



Figure 24

7. Remove both bolts and the encoder using the notch in the machine housing. See Figure 25. **Note: Both bolts must be removed to get the encoder out from behind the rail.**



Figure 25

### 7.1.2 Encoder Installation

What's in the box, see Figure 26.



Figure 26

1. The encoder is installed in the pocket behind the car rail. Insert the encoder into the pocket as shown in Figure 27. There is a taper in the front of the encoder shaft, put the encoder shaft into the hole of the shaft.



Figure 27

2. Make the encoder connect with the shaft with the M5 installation bolt, fix the encoder on the shaft and torque wrench to tighten the bolt to 44 in-lbs. using a hexagon spanner. See Figure 28.



Figure 28

3. Rotate the encoder, it should be very flexible at this time, tighten the encoder locking screw according to 11 in-lbs. by a hexagon spanner, make it so the encoder outer cannot rotate by hand. See Figure 29.



Figure 29

4. Install the encoder cable on the encoder. Take care to orient the plug and socket correctly. See Figure 30. **Note: Do not apply excessive pressure on the cable. It may destroy the encoder cable.**



Figure 30

5. Place the cable cover on the encoder and secure with the encoder cover bolt (and cover) to the encoder. See Figure 31.



Figure 31

6. Reconnect the power supply of machine and test it.
7. Align the encoder per controller instructions.

## 7.2 Brake Replacement

### Required Tools & Materials:

- Adjustable wrench
- Hex wrench (4 mm, 5 mm)
- Small flat head screwdriver

## **! WARNING**

**Before performing any maintenance on the machine brake(s), land the counterweight and take all the necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!**

**Read the entire brake replacement procedure before beginning any of the steps outlined below. Contact HWEC with any questions prior to beginning the brake repair or replacement.**

**Before opening any electrical enclosures on the machine, remove all electricity from the machine and brakes to prevent electrical shock that may result in injury or death during the maintenance period!**

### 7.2.1 Brake Removal

1. Remove covers as necessary to access terminal blocks and brake pin set screw (4 mm hex key).
2. Disconnect machine power, see Figure 32.

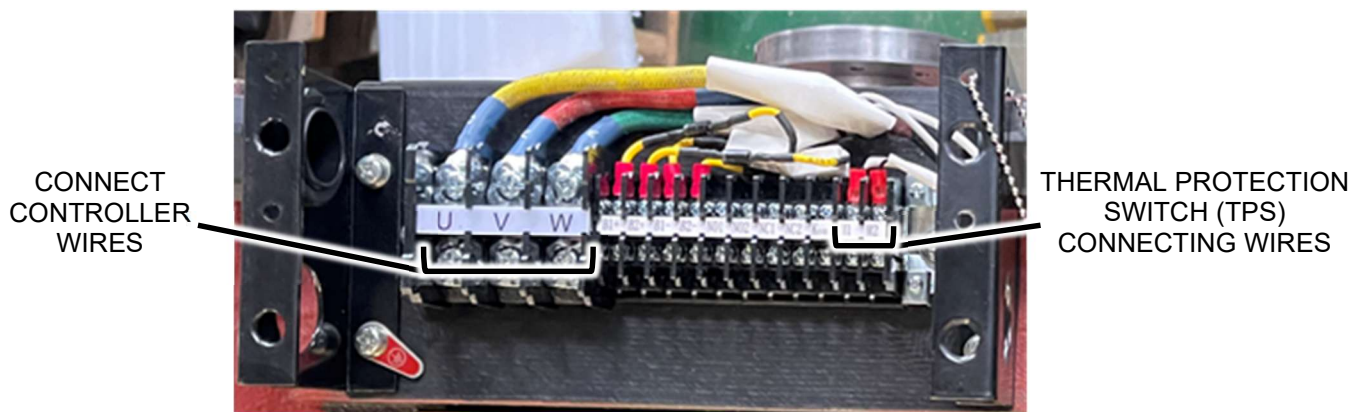


Figure 32

3. On the MACHINE side disconnect the Brake and Brake Switch wires for the brake that is to be worked on (Figure 33).

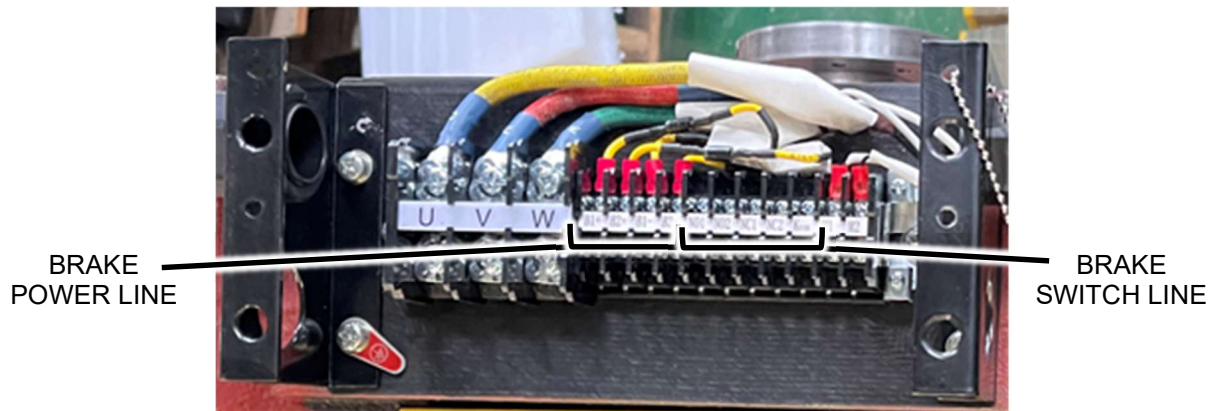


Figure 33

4. Use a wrench to loosen the mounting bolt of the fastener 1, so that the end face of the guide screw sleeve of the fastener 2 is separated from the mounting surface of the base.
5. Remove the brake and related connecting accessories.
6. New or repaired brakes are replaced in the reverse order of the above instructions. Adjust the guide screw sleeve of Part 2 and the mounting bolt of Part 1, so that the air gap between the armature of Part 5 and the armature of Part 4 is 0.3-0.55 mm, the gap between the brake belt and the brake wheel is 0.1-0.15 mm, and the distance between the guide screw sleeve of Part 2 and the iron surface of Part 4 is about 5 mm (no less than 3 mm under any conditions), as shown in Figure 34.

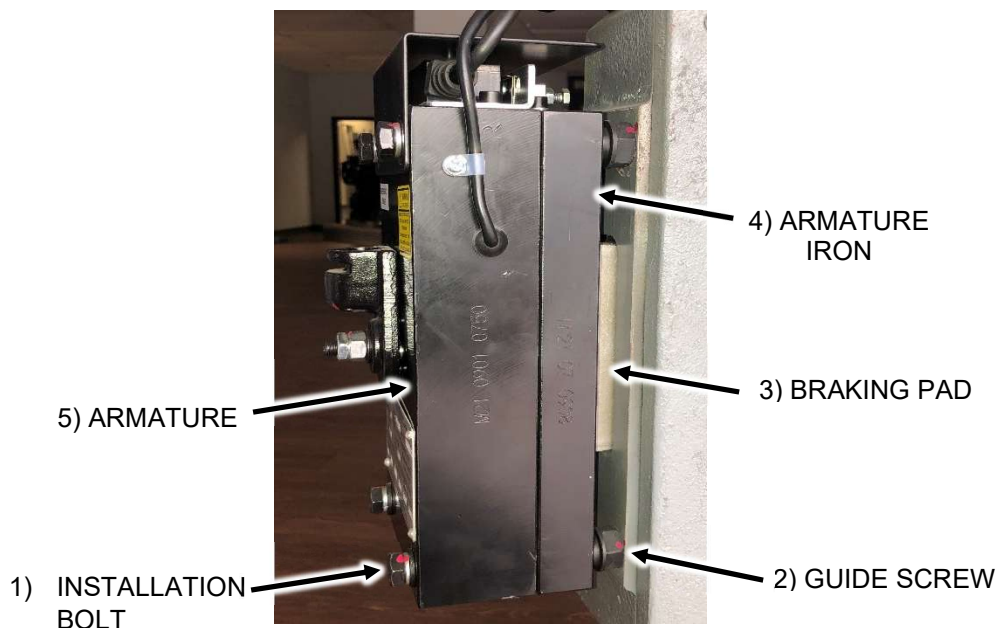



Figure 34

## 7.2.2 Brake Installation

After installation of the brake, please refer to Section 5.3 to confirm brake air gap has been restored to factory specifications.

# **WARNING**

**BRAKES MUST BE BURNISHED TO ACHIEVE FULL STOPPING TORQUE!**

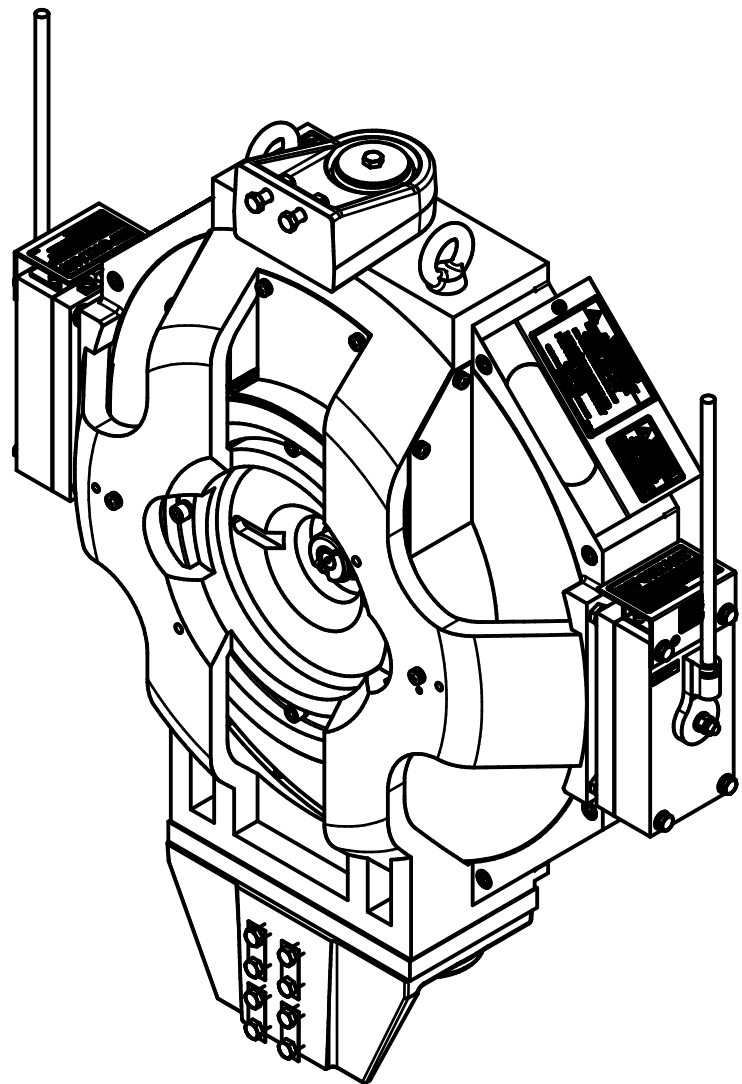

REPLACEMENT PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GLR-25S2-R	GLR GEARLESS MACHINE
1.1	1	GLR-25S2-150-LH	BRAKE, GLR
1.1.1	1	GLR-25S2-150-001	BRAKE, SHOE ASSEMBLY
1.1.2	1	GLT-25S2-150-002	BRAKE, SWITCH
1.1.3	1	GLT-25S2-150-003	BRAKE, HANDLE
1.1.4	1	P-163	IMPORTANT - BRAKE MONITOR STICKER
1.1.5	1	P-239	LABEL - BRAKE ADJUSTMENT WARNING
1.2	1	GLR-25S2-150-RH	BRAKE, GLR
1.2.1	1	GLR-25S2-150-001	BRAKE, SHOE ASSEMBLY
1.2.2	1	GLT-25S2-150-002	BRAKE, SWITCH
1.2.3	1	GLT-25S2-150-003	BRAKE, HANDLE
1.2.4	1	P-163	IMPORTANT - BRAKE MONITOR STICKER
1.2.5	1	P-239	LABEL - BRAKE ADJUSTMENT WARNING
1.3	2	GLT-25S2-152	BRAKE DIODE
1.4	1	GLR-25S2-176	TRACTION SHEAVE GUARD - 420 MM SHEAVE
	1	GLR-25S2-177	TRACTION SHEAVE GUARD - 480 MM SHEAVE
1.5	1	ENC-1313	HEIDENHAIN ENCODER ID # 768295-03 "ECN1313 2048 62S12-78"
1.6	1	P-176	TAG, GEARLESS EMERGENCY BRAKE
1.7	1	P-184	WARNING LABEL , MOVING PARTS CAN CRUSH AND CUT
1.8	1	P-221	WARNING LABEL, LIVE CIRCUITS
1.9	1	P-222	WARNING LABEL, HOT SURFACE
2	1	GLR-25S2-KIT	GLR MOUNTING KIT
3	1	GL080-001-04-020	ENCODER CABLE WITH PLUGS - 1.5 METER LENGTH
4	1	P-230	NAMEPLATE, SMALL, HOLLISTER-WHITNEY
5	1	P-238	TAG, DATA, MACHINE, CONTRACT

**NOTES UNLESS OTHERWISE SPECIFIED:**


1. RATINGS:


USAGE: SINGLE WRAP, 2:1  
 WHEEL DIAMETER: 420mm OR 480mm  
 VOLTAGE: 208V OR 480V  
 SPEED: UP TO 350 fpm  
 CAPACITY: UP TO 2,500#  
 SHAFT LOAD: 9,000#  
 SYSTEM LOAD: 18,000#

2. SEE SHEETS 3 AND 4 FOR ADDITIONAL RATINGS CHARTS.  
 3. BLUE LOCTITE OR EQUIVALENT REQUIRED ON ALL BOLTED CONNECTIONS.

WEIGHT: 1130 lbmass

		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC	
		TITLE GLR-25S2 GEARLESS MACHINE	
A	PRODUCTION RELEASE, PUR #1809	9/8/23	
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.		THIRD ANGLE PROJECTION	DRAWN BY AEW
		SCALE 1:8	MATERIAL SEE TABLE
		SHEET SIZE B	DATE 2/13/2023
		REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED	
		<b>GLR-25S2</b> SHEET 1 OF 4	



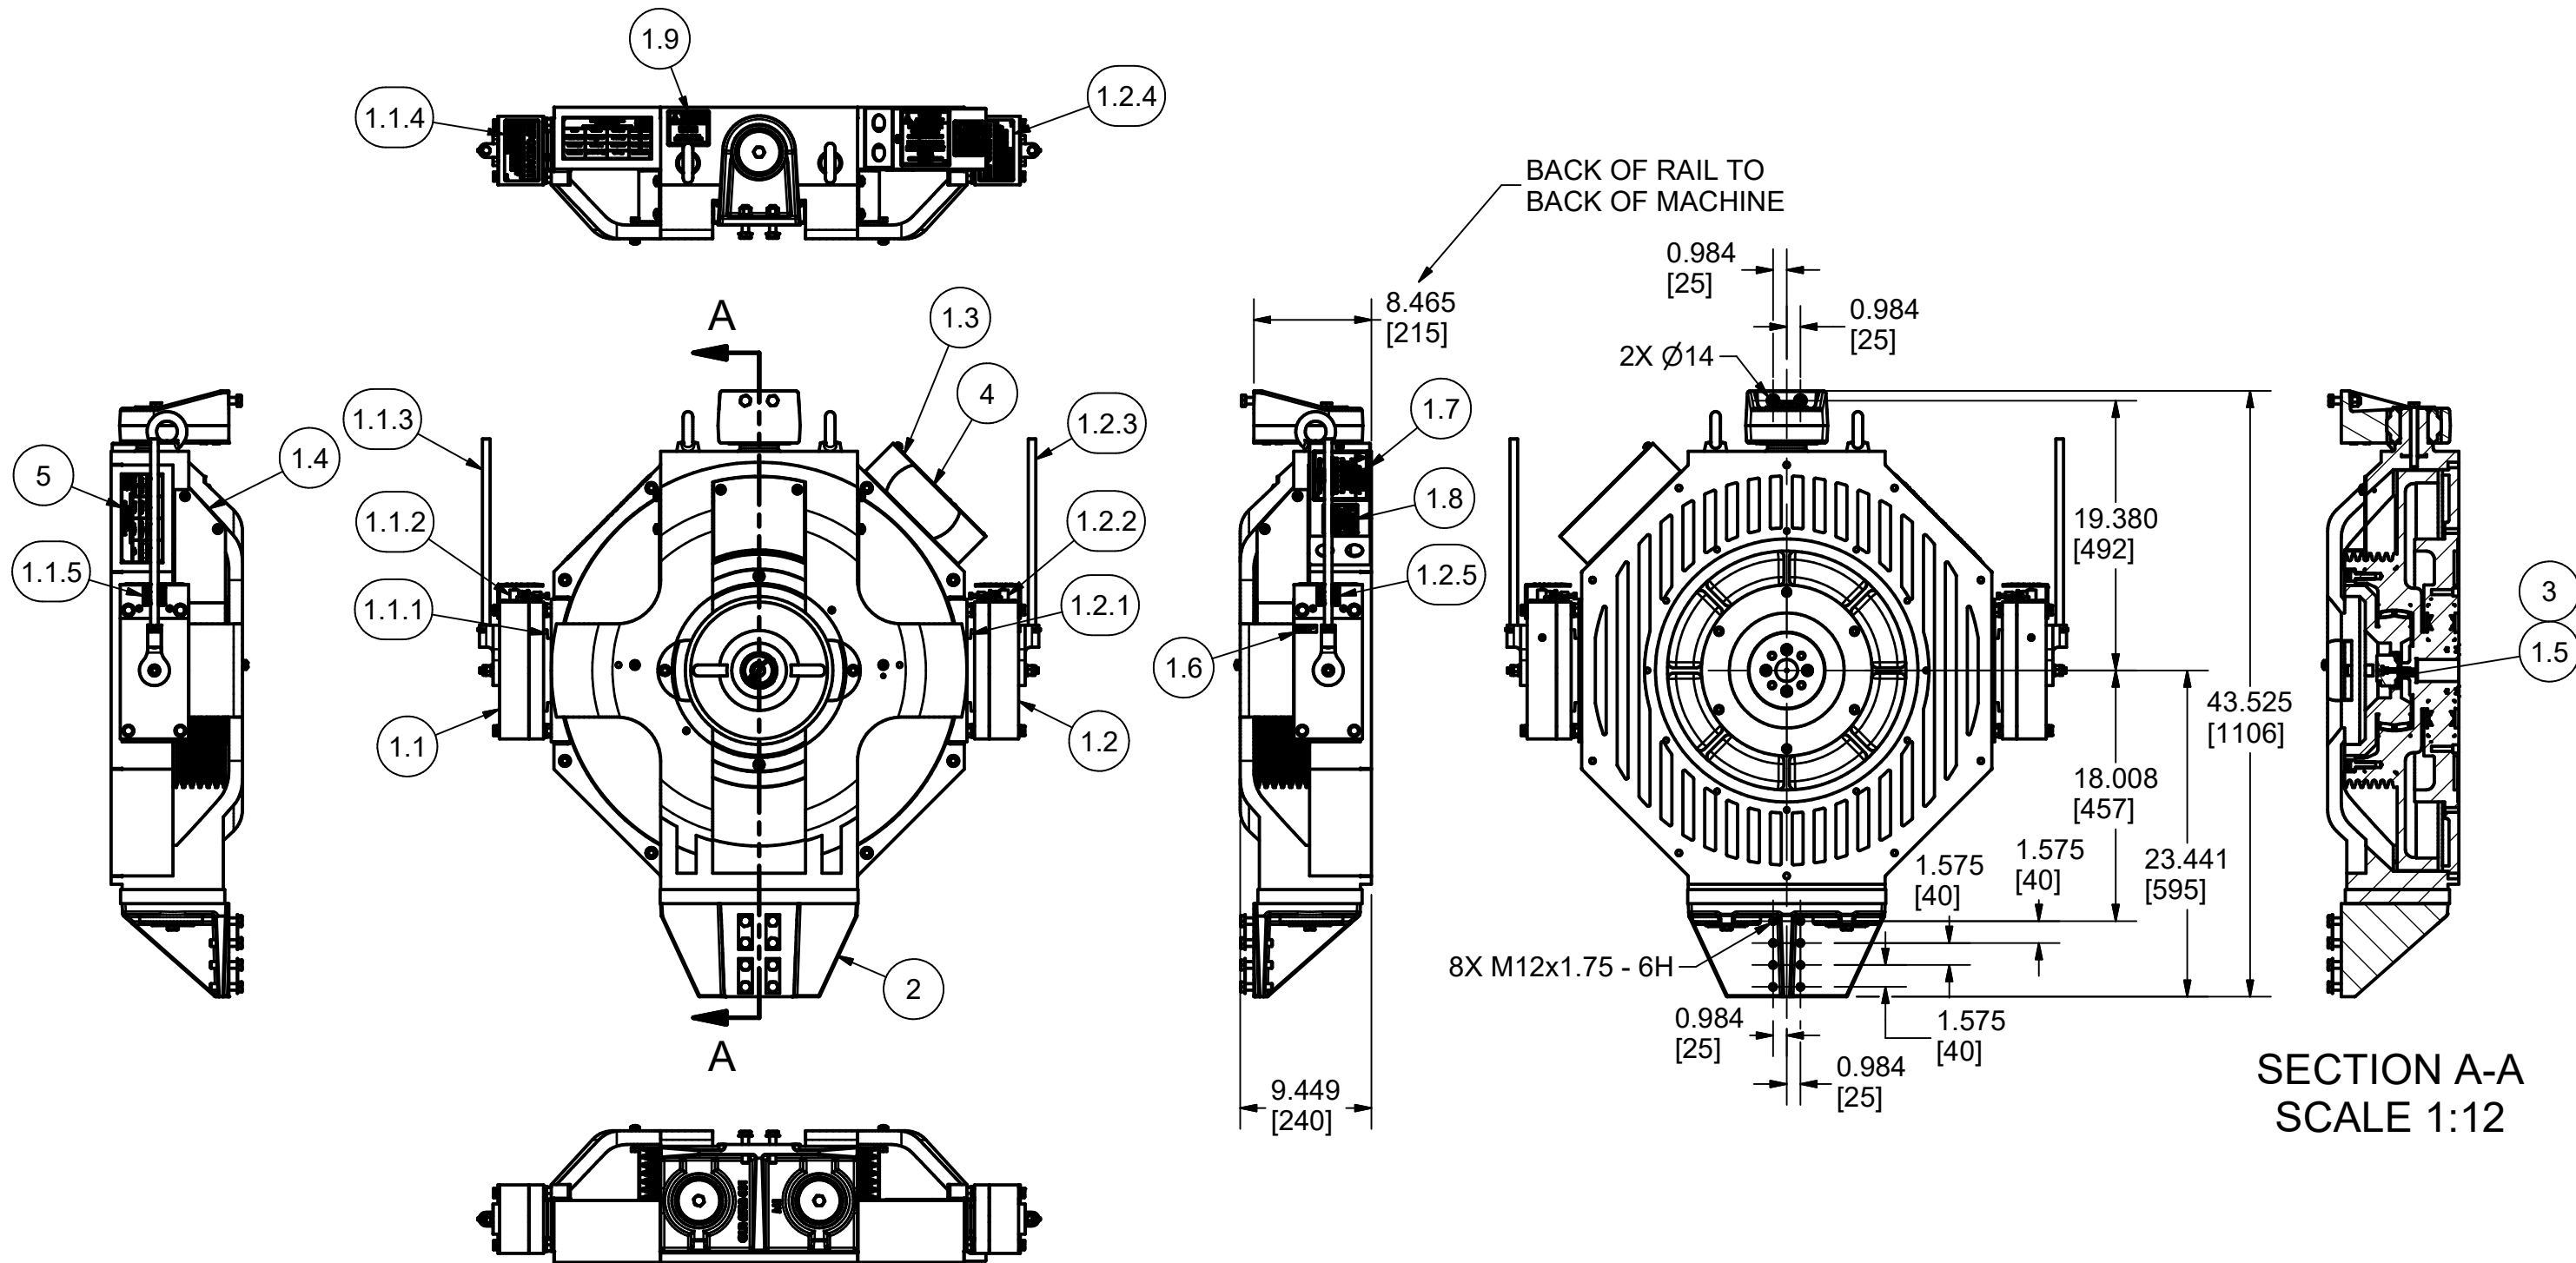

WEIGHT: 1130 lbmass

		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC	
		TITLE GLR-25S2 GEARLESS MACHINE	
A	PRODUCTION RELEASE, PUR #1809	9/8/23	
<small>THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.</small>		THIRD ANGLE PROJECTION	DRAWN BY AEW
			SCALE 1:12
		MATERIAL SEE TABLE	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED
		SHEET SIZE B	DATE 2/13/2023
		<b>GLR-25S2</b> SHEET 2 OF 4	

**208V, 2:1, 420mm SHEAVE, SINGLE WRAP**

HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	Max Accel Torque (ft-lbs)	Cwt (%)
GLR-25S2-A-R201A GLR-25S2-A-R201B	8 mm 10 mm	150	1500 2000 2500	4.6 6.1 7.7	3.4 4.6 5.7	30	69.3	208	168 174 180	17.3	13.9 18.5 23.1	33.4 44.4 55.4	87.1% 87.3% 87.8%	1514 1983 2376	485 634 760	350 465 580	699 930 1160	50
GLR-25S2-A-R202A GLR-25S2-A-R202B	8 mm 10 mm	200	1500 2000 2500	6.2 8.2 10.2	4.6 6.1 7.6	30	92.4	208	167 172 180	23.1	18.5 24.7 30.8	44.4 59.3 73.9	87.9% 88.2% 88.7%	1894 2456 2931	606 786 938	350 465 580	699 930 1160	50
GLR-25S2-A-R203A GLR-25S2-A-R203B	8 mm 10 mm	350	1500 2000 2500	10.8 14.3 17.9	8.0 10.7 13.3	30	161.7	208	163 170 180	40.4	32.2 42.6 53.3	77.3 102.2 127.9	91.1% 91.2% 91.9%	2440 3206 3703	781 1026 1185	350 465 580	699 930 1160	50

**208V, 2:1, 480mm SHEAVE, SINGLE WRAP**


HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	Max Accel Torque (ft-lbs)	Cwt (%)
GLR-25S2-B-R204A GLR-25S2-B-R204B	8 mm 10 mm	150	1500 2000 2500	4.6 6.1 7.7	3.4 4.6 5.7	30	60.6	208	163 172 180	15.2	14.8 19.7 24.7	35.5 47.3 59.3	85.6% 85.8% 86.5%	1692 2211 2637	541 708 844	400 530 665	800 1060 1330	50
GLR-25S2-B-R205A GLR-25S2-B-R205B	8 mm 10 mm	200	1500 2000 2500	6.2 8.2 10.2	4.6 6.1 7.6	30	80.9	208	165 173 182	20.2	20.0 26.3 33.0	48.0 63.1 79.2	86.5% 86.9% 87.2%	2115 2720 3345	677 870 1070	400 530 665	800 1060 1330	50
GLR-25S2-B-R206A GLR-25S2-B-R206B	8 mm 10 mm	350	1500 2000 2500	10.8 14.3 17.9	8.0 10.6 13.4	30	141.5	208	163 170 180	35.4	34.3 45.8 57.2	82.3 109.9 137.3	90.1% 90.9% 91.4%	2715 3306 3920	869 1058 1255	400 530 665	800 1060 1330	50

WEIGHT: 1130 lbmass

**NOTES UNLESS OTHERWISE SPECIFIED:**

- BRAKE INFORMATION:**  
 PICK VOLTAGE: 110  
 PICK AMPS: 1.32  
 HOLD VOLTAGE: 70  
 HOLD AMPS: 0.84
- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED**

		A		PRODUCTION RELEASE, PUR #1809		9/8/23		<b>HOLLISTER-WHITNEY ELEVATOR CO. LLC</b>					
				TITLE GLR-25S2 GEARLESS MACHINE									
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.				THIRD ANGLE PROJECTION		DRAWN BY AEW		SCALE SEE TABLE		MATERIAL SEE TABLE		REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED	
						SHEET SIZE B		DATE 2/13/2023		GLR-25S2 SHEET 3 OF 4			



**480V, 2:1, 420mm SHEAVE, SINGLE WRAP**

HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	Max Accel Torque (ft-lbs)	Cwt (%)
GLR-25S2-A-R401A GLR-25S2-A-R401B	8 mm	150	1500	4.6	3.4	30	69.3	480	390	17.3	6.1	14.6	88.4%	1362	436	350	699	50
	10 mm		2000	6.1	4.6				400		19.7	88.9%	1733	554	465	930		
	2500		7.7	5.7	430				24.5		89.3%	2084	667	580	1160			
GLR-25S2-A-R402A GLR-25S2-A-R402B	8 mm	200	1500	6.2	4.6	30	92.4	480	410	23.1	8.0	19.2	89.2%	1690	541	350	699	50
	10 mm		2000	8.2	6.1				418		25.2	89.4%	2206	706	465	930		
	2500		10.2	7.6	430				31.7		89.9%	2617	838	580	1160			
GLR-25S2-A-R403A GLR-25S2-A-R403B	8 mm	350	1500	10.8	8.0	30	161.7	480	402	40.4	13.8	33.1	91.5%	2331	746	350	699	50
	10 mm		2000	14.3	10.7				410		44.2	92.1%	2878	921	465	930		
	2500		17.9	13.3	425				55.2		92.5%	3421	1095	580	1160			


**480V, 2:1, 480mm SHEAVE, SINGLE WRAP**


HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	Max Accel Torque (ft-lbs)	Cwt (%)
GLR-25S2-B-R404A GLR-25S2-B-R404B	8 mm	150	1500	4.6	3.4	30	60.6	480	403	15.2	6.3	15.1	87.4%	1481	474	400	800	50
	10 mm		2000	6.1	4.6				420		20.2	88.3%	1822	583	530	1060		
	2500		7.7	5.7	430				25.4		88.7%	2208	706	665	1330			
GLR-25S2-B-R405A GLR-25S2-B-R405B	8 mm	200	1500	6.2	4.6	30	80.9	480	394	20.2	8.2	19.7	88.2%	1849	592	400	800	50
	10 mm		2000	8.2	6.1				412		26.2	88.9%	2304	737	530	1060		
	2500		10.2	7.6	425				32.9		89.0%	2855	914	665	1330			
GLR-25S2-B-R406A GLR-25S2-B-R406B	8 mm	350	1500	10.8	8.0	30	141.5	480	390	35.4	13.9	33.4	90.2%	2687	860	400	800	50
	10 mm		2000	14.3	10.6				405		44.4	91.5%	3088	988	530	1060		
	2500		17.9	13.4	415				55.7		92.1%	3597	1151	665	1330			

WEIGHT: 1130 lbmass

**NOTES UNLESS OTHERWISE SPECIFIED:**

- BRAKE INFORMATION:**  
 PICK VOLTAGE: 110  
 PICK AMPS: 1.32  
 HOLD VOLTAGE: 70  
 HOLD AMPS: 0.84
- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED**

		A		PRODUCTION RELEASE, PUR #1809		9/8/23		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC							
								GLR-25S2 GEARLESS MACHINE							
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.				THIRD ANGLE PROJECTION				DRAWN BY AEW		SCALE SEE TABLE		MATERIAL SEE TABLE		REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED	
								SHEET SIZE B		DATE 2/13/2023		<b>GLR-25S2</b> SHEET 4 OF 4			

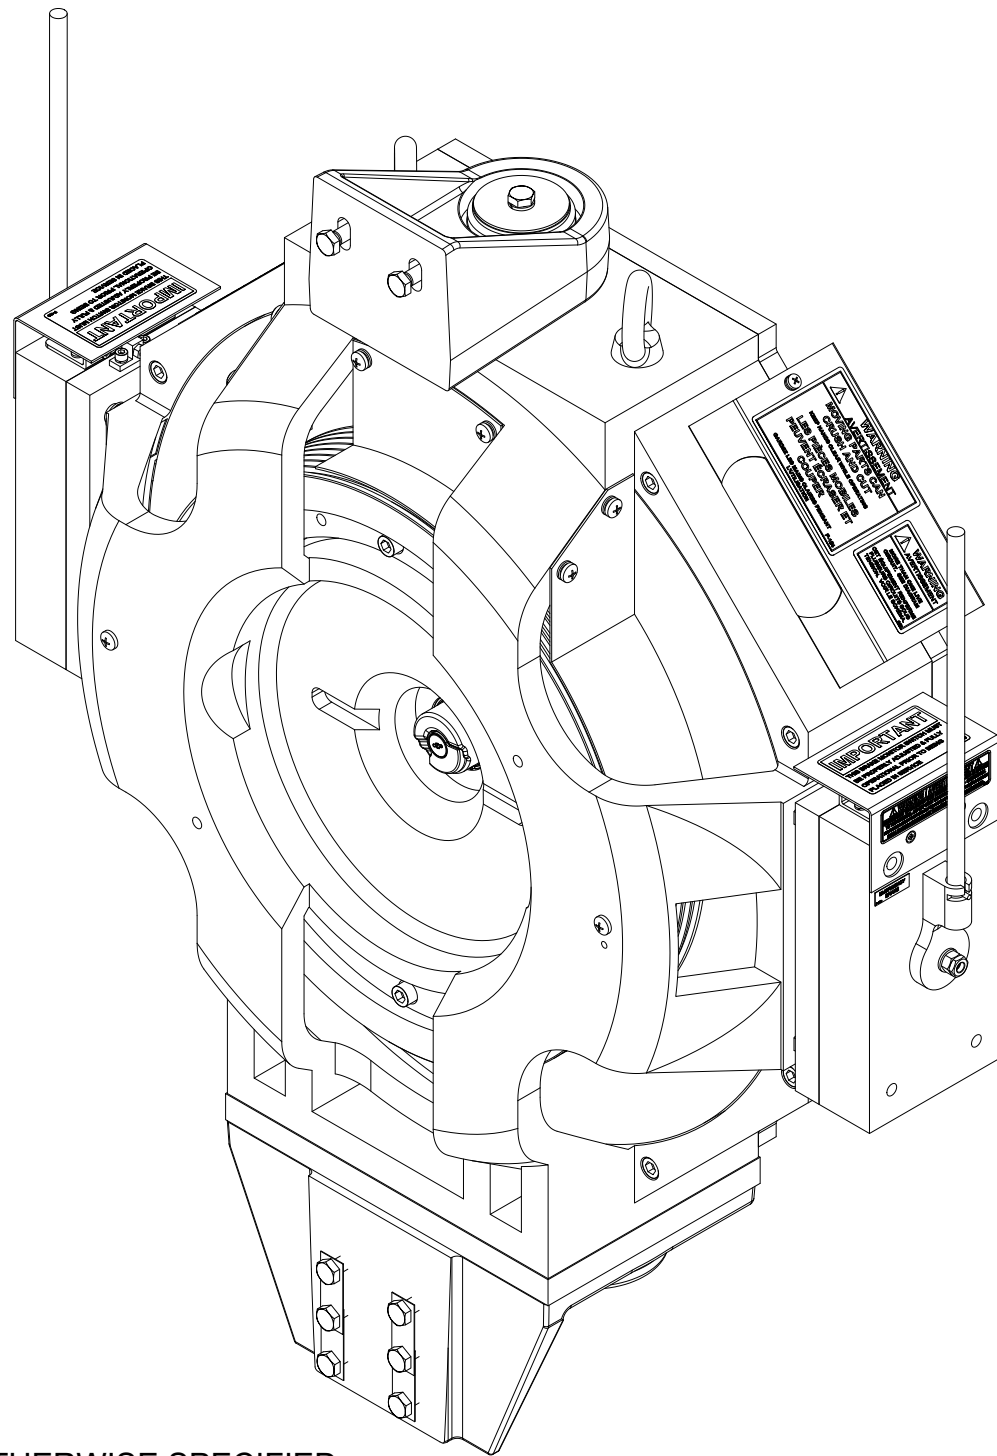

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GLR-35S2-R	GLR-35S2 GEARLESS MACHINE
1.1	1	GLR-35S2-150-LH	BRAKE, GLR-35S2, LEFT HAND
1.1.1	1	GLR-35S2-150-001	GLR-35S2 BRAKE, SHOE ASSEMBLY
1.1.2	1	GLT-25S2-150-002	BRAKE, SWITCH
1.1.3	1	GLT-25S2-150-003	BRAKE, HANDLE
1.1.4	1	P-163	IMPORTANT - BRAKE MONITOR STICKER
1.1.5	1	P-239	LABEL - BRAKE ADJUSTMENT WARNING
1.2	1	GLR-35S2-150-RH	BRAKE, GLR-35S2, RIGHT HAND
1.2.1	1	GLR-35S2-150-001	GLR-35S2 BRAKE, SHOE ASSEMBLY
1.2.2	1	GLT-25S2-150-002	BRAKE, SWITCH
1.2.3	1	GLT-25S2-150-003	BRAKE, HANDLE
1.2.4	1	P-163	IMPORTANT - BRAKE MONITOR STICKER
1.2.5	1	P-239	LABEL - BRAKE ADJUSTMENT WARNING
1.3	2	GLT-25S2-152	BRAKE DIODE
1.4	1	GLR-35S2-176	TRACTION SHEAVE GUARD - 520 MM SHEAVE
1.5	1	GLR-35S2-KIT	MOUNTING KIT - GLR-35S2
1.6	1	ENC-1313	HEIDENHAIN ENCODER ID # 768295-03 "ECN1313 2048 62S12-78"
1.7	1	P-176	TAG, GEARLESS EMERGENCY BRAKE
1.8	1	P-221	WARNING LABEL, LIVE CIRCUITS
1.9	1	P-222	WARNING LABEL, HOT SURFACE
2	1	GL080-001-04-020	ENCODER CABLE WITH PLUGS - 1.5 METER LENGTH
3	1	P-184	WARNING LABEL, MOVING PARTS CAN CRUSH AND CUT
4	1	P-230	NAMEPLATE, SMALL, HOLLISTER-WHITNEY
5	1	P-238	TAG, DATA, MACHINE, CONTRACT


**NOTES UNLESS OTHERWISE SPECIFIED:**


1. RATINGS:

USAGE: SINGLE WRAP, 2:1  
 WHEEL DIAMETER: 520mm  
 VOLTAGE: 208V OR 480V  
 SPEED: UP TO 350 fpm  
 CAPACITY: UP TO 3,500#  
 SHAFT LOAD: 9,600#  
 SYSTEM LOAD: 19,200#


2. SEE SHEETS 3 AND 4 FOR ADDITIONAL RATINGS CHARTS.  
 3. BLUE LOCTITE OR EQUIVALENT REQUIRED ON ALL BOLTED CONNECTIONS.

WEIGHT: 1498.7 lbmass

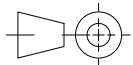		B UPDATE PARTS LIST AND SHAFT LOAD, PUR 2129 AEW 4/15/26 A PRODUCTION RELEASE, PUR 2078 AEW 11/24/25		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC			
				TITLE <b>GLR-35S2 GEARLESS MACHINE</b>			
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.		THIRD ANGLE PROJECTION 		DRAWN BY AEW	SCALE 1:6	MATERIAL SEE PARTS LIST	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED <b>GLR-35S2</b>
				SHEET SIZE B	DATE 8/19/2025	SHEET 1 OF 4	

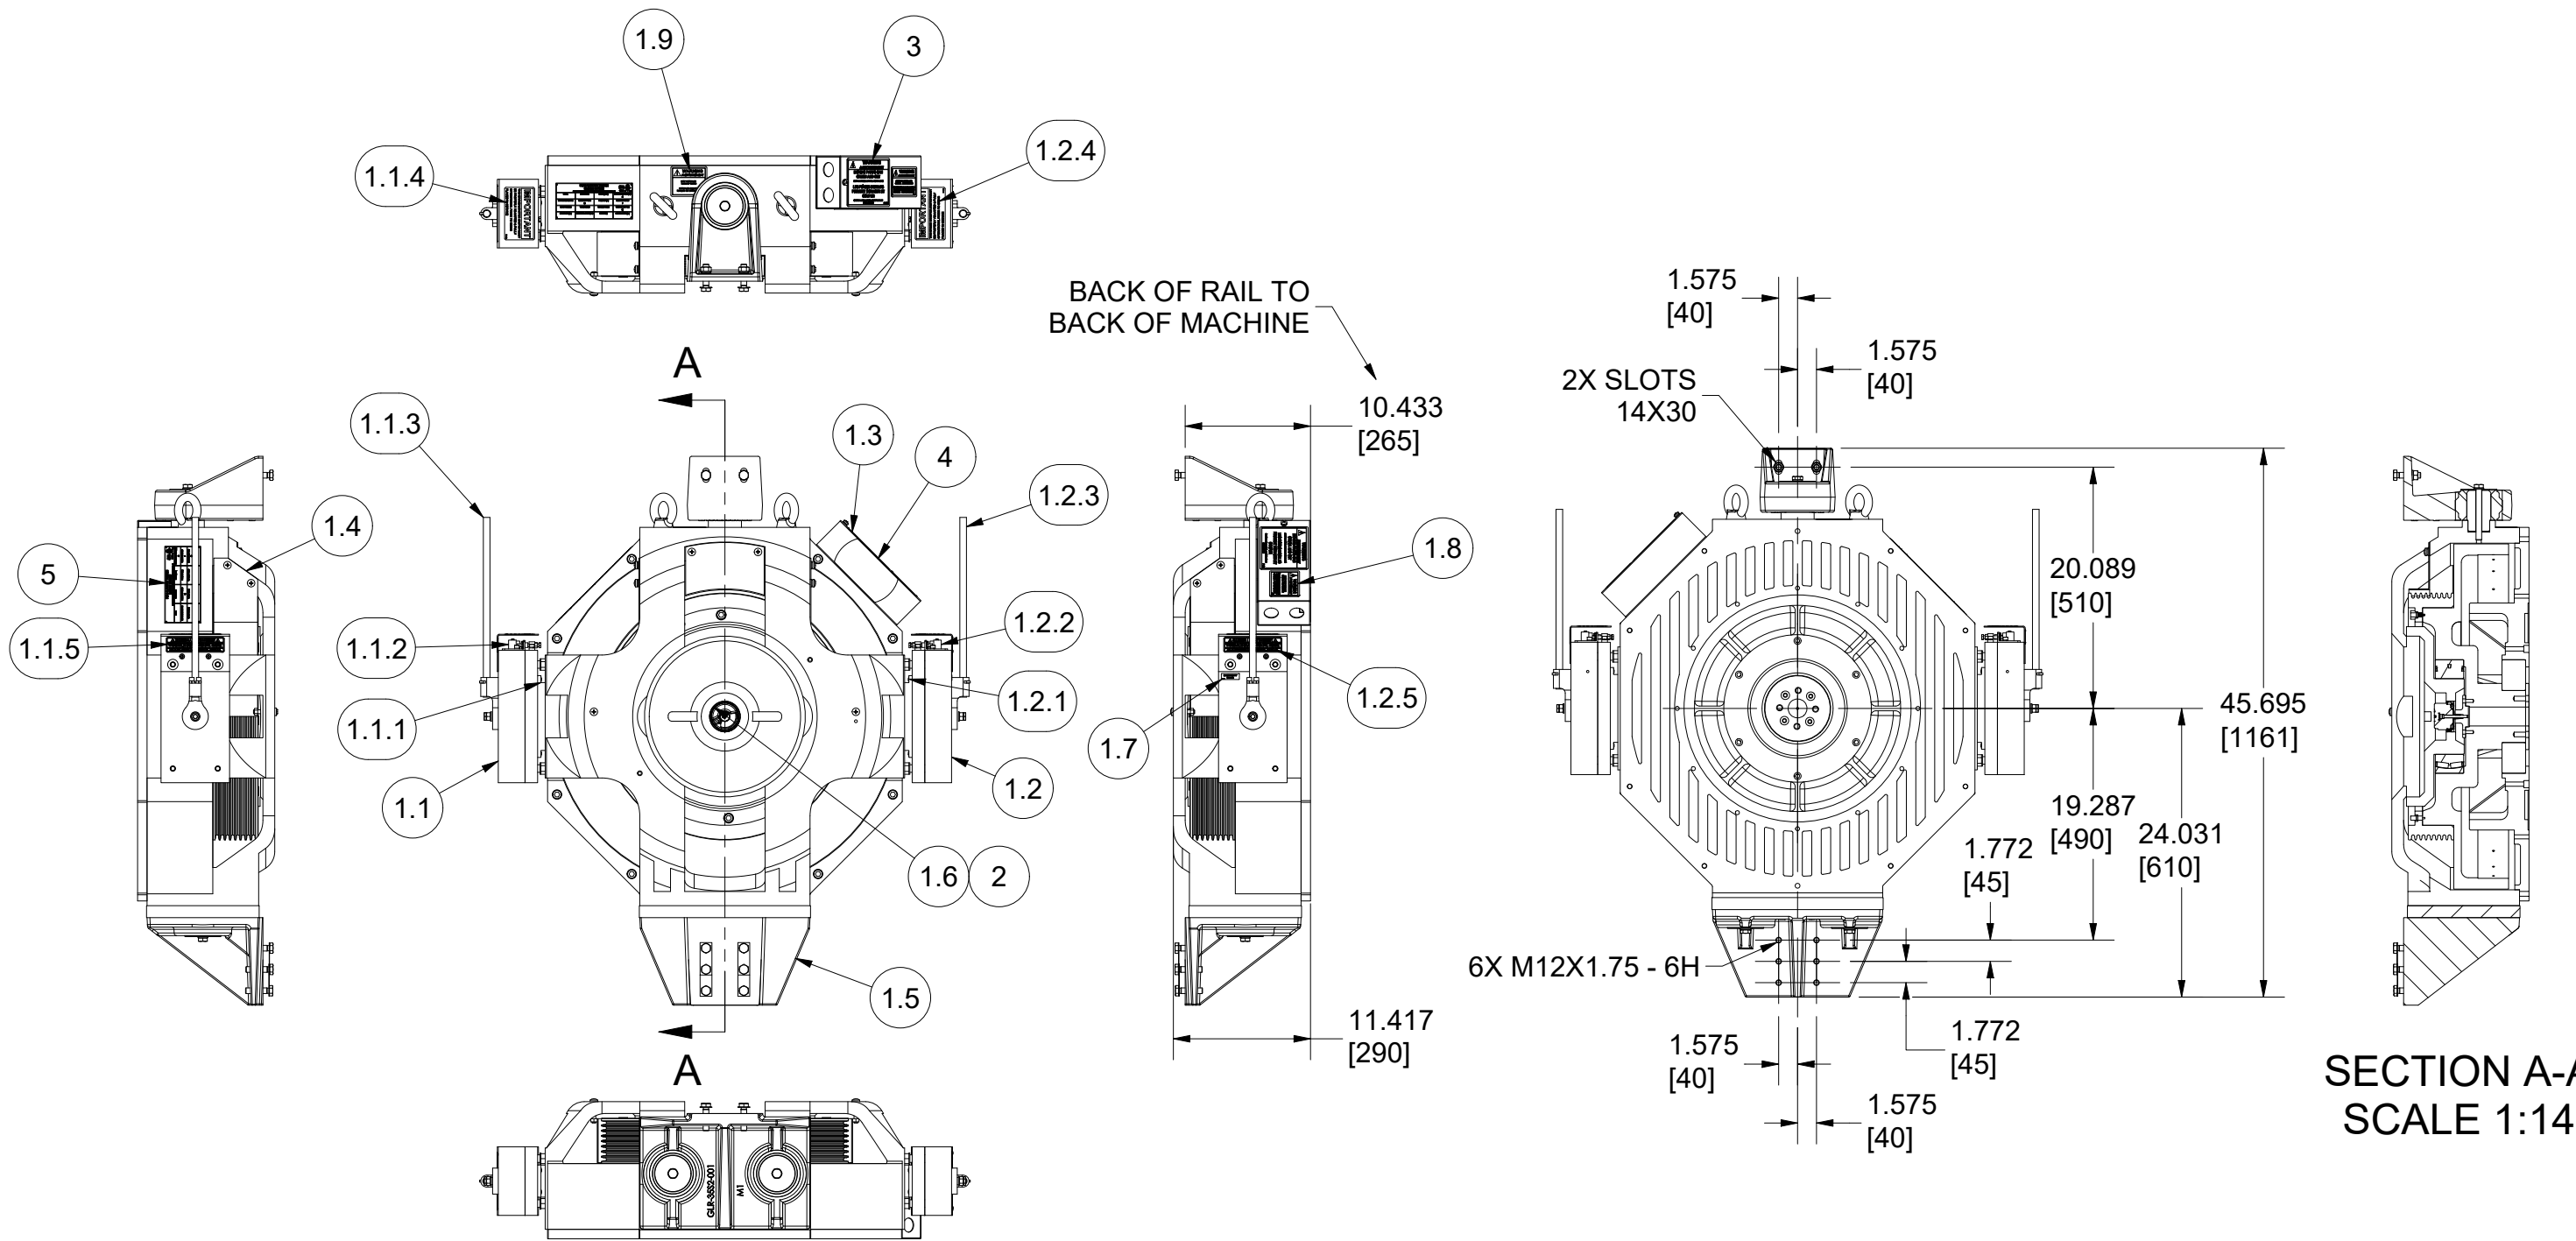

WEIGHT: 1498.7 lbmass

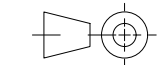B UPDATE PARTS LIST AND SHAFT LOAD, PUR 2129 AEW 4/15/26		TITLE <b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC					
				A PRODUCTION RELEASE, PUR 2078 AEW 11/24/25			
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.		THIRD ANGLE PROJECTION 		DRAWN BY AEW	SCALE 1:14	MATERIAL SEE PARTS LIST	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED
		SHEET SIZE B		DATE 8/19/2025		<b>GLR-35S2</b> SHEET 2 OF 4	

**480V, 2:1, 520 mm SHEAVE, 8 mm ROPES, SINGLE WRAPPED**

Supplier Part #	HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Capacity (kg)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage (V)	Actual Voltage (V)	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	MaxAccel Torque (ft-lbs)	Cwt (%)
WYT-R0.75H520-R401A	GLR-35S2-C-R401A	8 mm	150	3000	1361	7.79	5.81	30	56.0	480	420	14.0	11.2	26.9	85.3%	2914	932	731	1461	50
				3500	1588	9.13	6.81	30	56.0	480	435	14.0	13.2	31.7	86.2%	3206	1026	856	1713	50
WYT-R1.0H520-R402A	GLR-35S2-C-R402A	8 mm	200	3000	1361	10.43	7.78	30	75.0	480	415	18.8	14.2	34.1	86.5%	3583	1146	730	1461	50
				3500	1588	12.23	9.12	30	75.0	480	430	18.8	16.6	39.8	87.3%	3952	1265	856	1713	50
WYT-R1.75H520-R403A	GLR-35S2-C-R403A	8 mm	350	3000	1361	18.21	13.58	30	131.0	480	410	32.8	24.4	58.6	88.7%	5236	1675	730	1460	50
				3500	1588	21.36	15.93	30	131.0	480	425	32.8	28.4	68.2	89.3%	5815	1861	856	1713	50


**208V, 2:1, 520 mm SHEAVE, 8 mm ROPES, SINGLE WRAPPED**

Supplier Part #	HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Capacity (kg)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage (V)	Actual Voltage (V)	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	MaxAccel Torque (ft-lbs)	Cwt (%)
WYT-R0.75H520-R201A	GLR-35S2-C-R201A	8 mm	150	3000	1361	7.79	5.81	30	56.0	208	175	14.0	25.4	61.0	85.5%	2874	920	731	1461	50
				3500	1588	9.13	6.81	30	56.0	208	180	14.0	29.5	70.8	86.4%	3159	1011	856	1713	50
WYT-R1.0H520-R202A	GLR-35S2-C-R202A	8 mm	200	3000	1361	10.43	7.78	30	75.0	208	172	18.8	32.4	77.8	86.7%	3530	1129	730	1461	50
				3500	1588	12.23	9.12	30	75.0	208	180	18.8	38.5	92.4	87.6%	3859	1235	856	1713	50
WYT-R1.75H520-R203A	GLR-35S2-C-R203A	8 mm	350	3000	1361	18.21	13.58	30	131.0	208	170	32.8	55.8	133.9	88.9%	5143	1646	730	1460	50
				3500	1588	21.36	15.93	30	131.0	208	180	32.8	65.0	156.0	89.6%	5652	1809	856	1713	50

WEIGHT:

**NOTES UNLESS OTHERWISE SPECIFIED:**

- BRAKE INFORMATION:**  
 PICK VOLTAGE: 110  
 PICK AMPS: 1.98  
 HOLD VOLTAGE: 70  
 HOLD AMPS: 1.26
- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED**

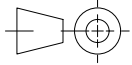B UPDATE PARTS LIST AND SHAFT LOAD, PUR 2129 AEW 4/15/26		HOLLISTER-WHITNEY ELEVATOR CO. LLC				
				TITLE GLR-35S2 GEARLESS MACHINE		
A PRODUCTION RELEASE, PUR 2078 AEW 11/24/25		DRAWN BY AEW		SCALE B	MATERIAL SEE PARTS LIST	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED <b>GLR-35S2</b> SHEET 3 OF 4
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.				THIRD ANGLE PROJECTION 		DATE 8/19/2025

**480V, 2:1, 520 mm SHEAVE, 10 mm ROPES, SINGLE WRAPPED**

Supplier Part #	HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Capacity (kg)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage (V)	Actual Voltage (V)	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	MaxAccel Torque (ft-lbs)	Cwt (%)
WYT-R0.75H520-R401B	GLR-35S2-C-R401B	10 mm	150	3000	1361	7.79	5.81	30	56.0	480	420	14.0	11.2	26.9	85.3%	2914	932	731	1461	50
				3500	1588	9.13	6.81	30	56.0	480	435	14.0	13.2	31.7	86.2%	3206	1026	856	1713	50
WYT-R1.0H520-R402B	GLR-35S2-C-R402B	10 mm	200	3000	1361	10.43	7.78	30	75.0	480	415	18.8	14.2	34.1	86.5%	3583	1146	730	1461	50
				3500	1588	12.23	9.12	30	75.0	480	430	18.8	16.6	39.8	87.3%	3952	1265	856	1713	50
WYT-R1.75H520-R403B	GLR-35S2-C-R403B	10 mm	350	3000	1361	18.21	13.58	30	131.0	480	410	32.8	24.4	58.6	88.7%	5236	1675	730	1460	50
				3500	1588	21.36	15.93	30	131.0	480	425	32.8	28.4	68.2	89.3%	5815	1861	856	1713	50


**208V, 2:1, 520 mm SHEAVE, 10 mm ROPES, SINGLE WRAPPED**


Supplier Part #	HOLLISTER-WHITNEY ORDERING PART #	Rope Diameter	Speed (fpm)	Capacity (lbs)	Capacity (kg)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage (V)	Actual Voltage (V)	Rated Freq (Hz)	Rated Current (A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque (ft-lbs)	MaxAccel Torque (ft-lbs)	Cwt (%)
WYT-R0.75H520-R201B	GLR-35S2-C-R201B	10 mm	150	3000	1361	7.79	5.81	30	56.0	208	175	14.0	25.4	61.0	85.5%	2874	920	731	1461	50
				3500	1588	9.13	6.81	30	56.0	208	180	14.0	29.5	70.8	86.4%	3159	1011	856	1713	50
WYT-R1.0H520-R202B	GLR-35S2-C-R202B	10 mm	200	3000	1361	10.43	7.78	30	75.0	208	172	18.8	32.4	77.8	86.7%	3530	1129	730	1461	50
				3500	1588	12.23	9.12	30	75.0	208	180	18.8	38.5	92.4	87.6%	3859	1235	856	1713	50
WYT-R1.75H520-R203B	GLR-35S2-C-R203B	10 mm	350	3000	1361	18.21	13.58	30	131.0	208	170	32.8	55.8	133.9	88.9%	5143	1646	730	1460	50
				3500	1588	21.36	15.93	30	131.0	208	180	32.8	65.0	156.0	89.6%	5652	1809	856	1713	50

WEIGHT:


**NOTES UNLESS OTHERWISE SPECIFIED:**

- BRAKE INFORMATION:**  
 PICK VOLTAGE: 110  
 PICK AMPS: 1.98  
 HOLD VOLTAGE: 70  
 HOLD AMPS: 1.26
- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED**

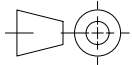
B UPDATE PARTS LIST AND SHAFT LOAD, PUR 2129 AEW 4/15/26		HOLLISTER-WHITNEY ELEVATOR CO. LLC				
				TITLE GLR-35S2 GEARLESS MACHINE		
A PRODUCTION RELEASE, PUR 2078 AEW 11/24/25		DRAWN BY AEW		SCALE B	MATERIAL SEE PARTS LIST	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED <b>GLR-35S2</b> SHEET 4 OF 4
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.				THIRD ANGLE PROJECTION 		DATE 8/19/2025

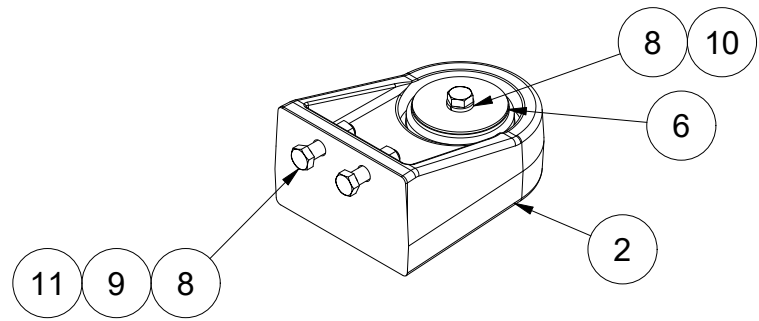


PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GLR-25S2-001	LOWER MOUNTING BRACKET
2	1	GLR-25S2-002	UPPER MOUNTING BRACKET
3	1	GLR-25S2-003	PAD, ISOLATION
4	4	GLR-25S2-004	BOLT LOCKING PLATE
5	3	GLR-25S2-005	CYLINDRICAL ISOLATION BUSHING
6	3	GLR-25S2-006	PLATE WASHER, OVERSIZED
7	1	GT31-502	THREAD LOCKER, 243
8	5	M12 LOCK WASHER	ZINC-PLATED LOCK WASHER, DIN 127B 
9	10	M12 X 1.75 X 50	ZINC-PLATED CLASS 8.8 STEEL HEX HEAD SCREW, DIN 933
10	3	M12 X 1.75 X 110	ZINC-PLATED CLASS 8.8 STEEL HEX HEAD SCREW, DIN 931
11	2	M12 X 1.75	ZINC-PLATED CLASS 8 STEEL HEX NUT, DIN 934


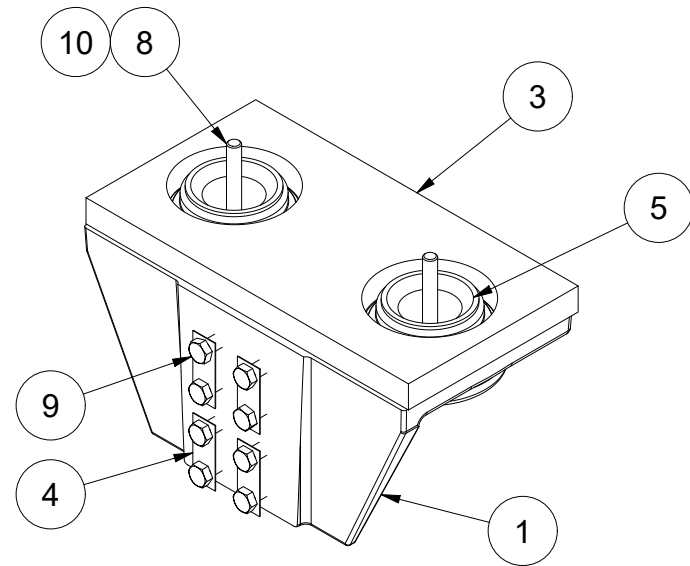


WEIGHT: 76.1 lbmass

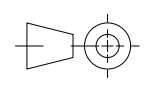
		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC	
		TITLE <b>GLR MOUNTING KIT</b>	
C	ADD LOCTITE, UPDATE HARDWARE, PUR #2014	AEW 6/26/25	
<p>THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY.</p> <p>THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.</p>		THIRD ANGLE PROJECTION	
			
DRAWN BY AEW	SCALE 1:6	MATERIAL N/A	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED
SHEET SIZE B		DATE 2/13/2023	<b>GLR-25S2-KIT</b> SHEET 1 OF 1

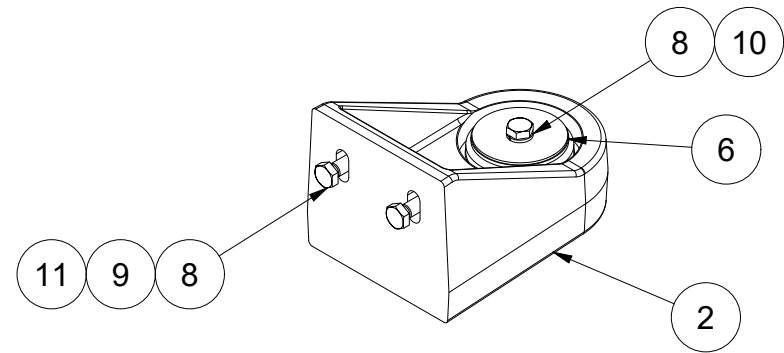

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GLR-35S2-001	LOWER MOUNTING BRACKET - GLR-35S2
2	1	GLR-35S2-002	UPPER MOUNTING BRACKET - GLR-35S2
3	1	GLR-35S2-003	PAD, ISOLATION - GLR-35S2
4	4	GLR-35S2-004	BOLT LOCKING PLATE
5	3	GLR-25S2-005	CYLINDRICAL ISOLATION BUSHING
6	3	GLR-25S2-006	PLATE WASHER, OVERSIZED
7	1	GT31-502	THREAD LOCKER, 243
8	5	M12 LOCK WASHER	ZINC-PLATED LOCK WASHER, DIN 127B
9	8	M12 X 1.75 X 50	ZINC-PLATED CLASS 12.9 STEEL HEX HEAD SCREW, DIN 933
10	3	M12 X 1.75 X 110	ZINC-PLATED CLASS 8.8 STEEL HEX HEAD SCREW, DIN 931
11	2	M12 X 1.75	ZINC-PLATED CLASS 12 STEEL HEX NUT, DIN 934

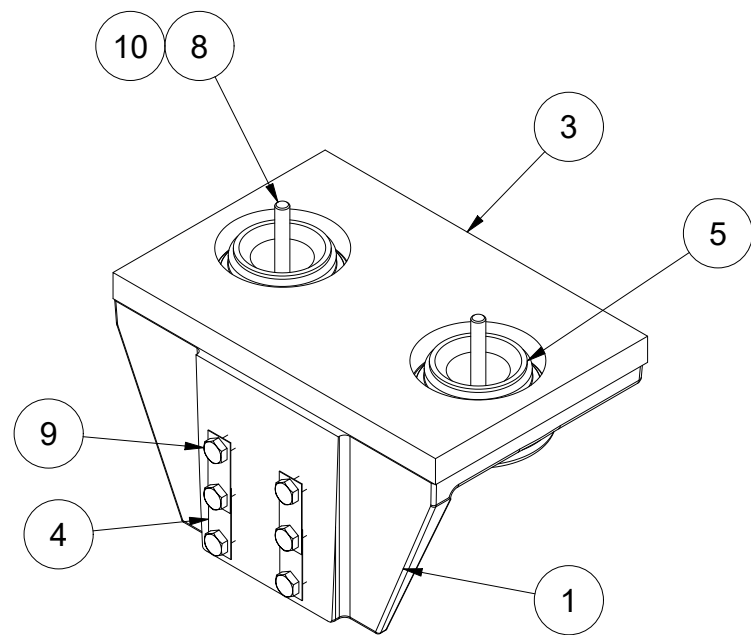

WEIGHT: 98.5 lbmass

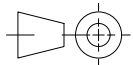		<b>HOLLISTER-WHITNEY</b> ELEVATOR CO. LLC		<b>MOUNTING KIT - GLR-35S2</b>		
B	UPDATE HARDWARE, PUR #2116	AEW 3/18/26	TITLE			
A	PRODUCTION RELEASE, PUR #2078	AEW 11/24/25	MATERIAL			
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.		THIRD ANGLE PROJECTION 	DRAWN BY AEW	SCALE 1:6	MATERIAL N/A	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED <b>GLR-35S2-KIT</b> SHEET 1 OF 1
			SHEET SIZE B	DATE 7/10/2025		



# HEIDENHAIN



Product Information

**ECN 1313**

**ECN 1325**

**ERN 1387**


Rotary Encoders with  
Plane-Surface Coupling for  
Elevator Servo Drive  
Control

July 2017

# ECN/ERN 1300 series

Rotary encoders with integral bearings for elevator technology

- Simple installation
- Rigid shaft coupling
- Plane-surface coupling for large mounting tolerances
- Uniform dimensions for various electrical interfaces

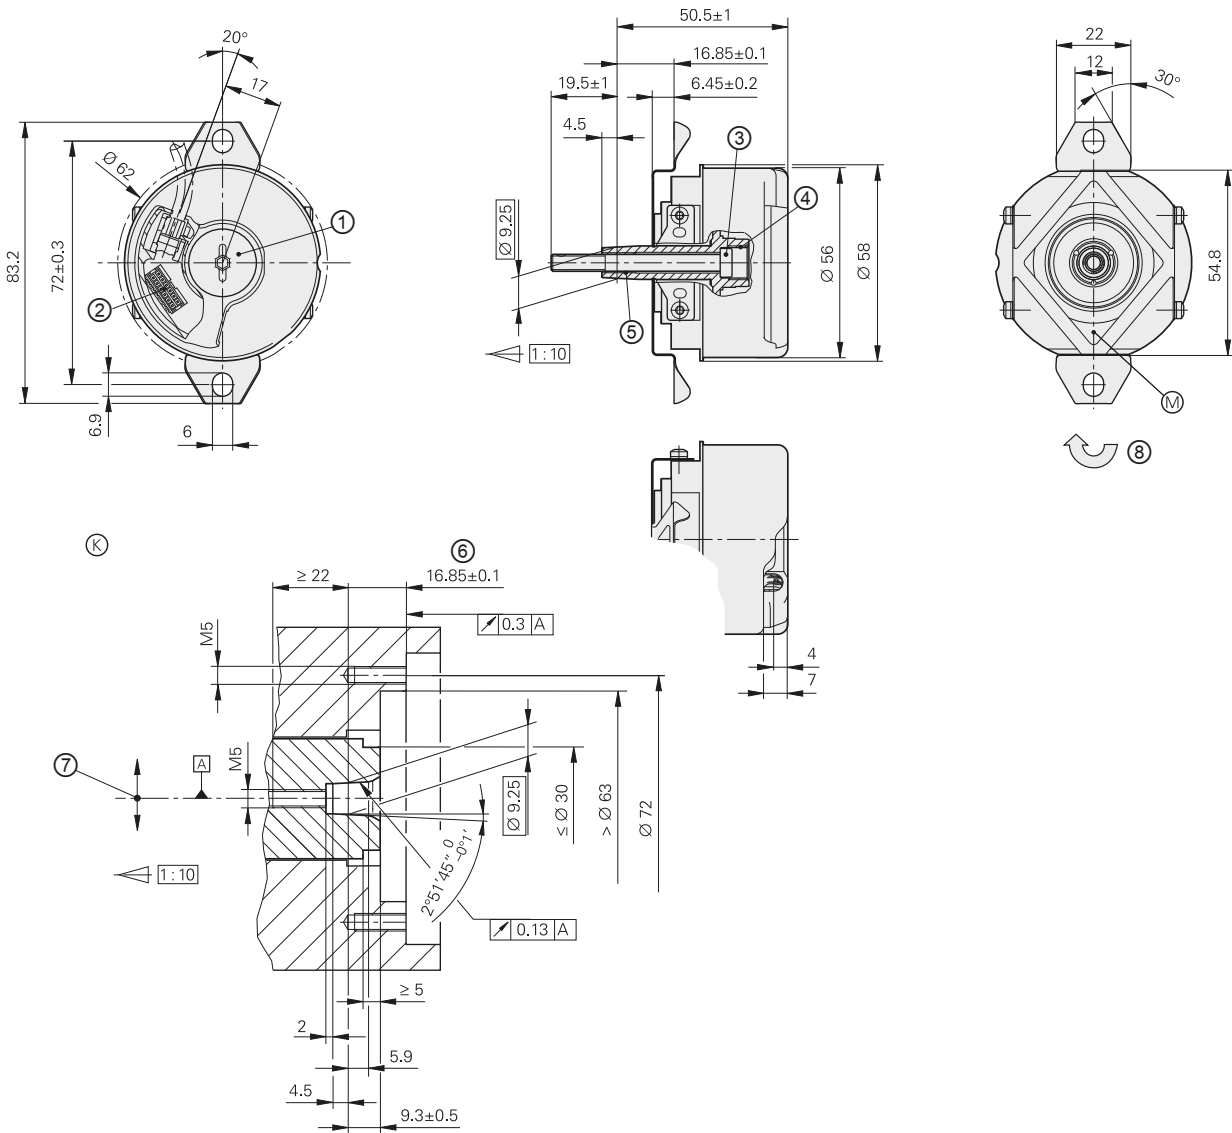

mm  
  
 Tolerancing ISO 8015  
 ISO 2768 - m H  
 < 6 mm: ±0.2 mm

- ▣ = Bearing of mating shaft
- ▣ = Bearing of encoder
- ⊙ = Required mating dimensions
- ⊙ = Measuring point for operating temperature
- 1 = Screw plug, width A/F 3 and 4. Tightening torque: 5+0.5 Nm
- 2 = PCB connector
- 3 = Self-tightening screw M5 x 50 DIN 6912 width A/F 4, tightening torque 5+0.5 Nm
- 4 = M10 back-off thread
- 5 = M6 back-off thread
- 6 = Max. permissible tolerance during motor shaft rotation ±1.5 mm
- 7 = Max. permissible static radial offset of motor shaft in indicated direction ±0.13 mm
- 8 = Direction of shaft rotation for output signals as per the interface description

	<b>Absolute</b>		<b>Incremental</b>
	<b>ECN 1325</b>	<b>ECN 1313</b>	<b>ERN 1387</b>
<b>Part number</b>	683643-xx	768295-xx	749146-xx
<b>Interface<sup>1)</sup></b>	EnDat 2.2		~ 1 V <sub>PP</sub>
Ordering designation	EnDat22	EnDat01	–
Position values/revolution	33554432 (25 bits)	8192 (13 bits)	Z1 track <sup>3)</sup>
Electrically permissible speed/error <sup>2)</sup>	≤ 15000 rpm (for continuous position value)	≤ 1500 rpm/±1 LSB ≤ 12000 rpm/±50 LSB	–
Calculation time t <sub>cal</sub> Clock frequency	≤ 7 μs ≤ 16 MHz	≤ 9 μs ≤ 2 MHz	– –
Incremental signals <sup>1)</sup>	–	~ 1 V <sub>PP</sub>	~ 1 V <sub>PP</sub>
Line count/system accuracy	2048/±20''		
Reference mark	–		One
Cutoff frequency –3 dB	–	≥ 400 kHz	≥ 210 kHz
<b>Electrical connection</b> Via PCB connector	<i>Rotary encoder</i> : 12-pin <i>Temperature sensor<sup>4)</sup></i> : 4-pin	12-pin	14-pin
Voltage supply	DC 3.6 V to 14 V		DC 5 V ±0.25 V
Power consumption <sup>1)</sup> (maximum)	3.6 V: ≤ 600 mW 14 V: ≤ 700 mW		–
<b>Current consumption</b>	5 V: 85 mA (typical, without load)		≤ 130 mA (without load)
<b>Stator coupling</b>	Plane-surface coupling		
<b>Shaft</b>	Taper shaft Ø 9.25 mm; taper 1:10		
Mech. permiss. speed n	≤ 2000 rpm		
Starting torque	≤ 0.01 Nm (at 20 °C)		
Moment of inertia of rotor	2.6 · 10 <sup>-6</sup> kgm <sup>2</sup>		
Permissible axial motion of measured shaft <sup>5)</sup>	±1.5 mm		
Radial runout of the measured shaft	0.13 mm		
<b>Vibration</b> 55 Hz to 2000 Hz <b>Shock</b> 6 ms	≤ 300 m/s <sup>2</sup> <sup>6)</sup> (EN 60068-2-6) ≤ 2000 m/s <sup>2</sup> (EN 60068-2-27)		
<b>Operating temperature</b>	–40 °C to +115 °C		–40 °C to +120 °C
<b>Protection</b> EN 60529	IP40 when mounted		
<b>Mass</b>	≈ 0.25 kg		

<sup>1)</sup> See *Interfaces of HEIDENHAIN Encoders* brochure

<sup>2)</sup> Velocity-dependent deviations between the absolute value and incremental signals

<sup>3)</sup> One sine and one cosine signal per revolution

<sup>4)</sup> Evaluation optimized for KTY 84-130

<sup>5)</sup> Compensation of mounting tolerances and thermal expansion, not dynamic motion

<sup>6)</sup> As per standard for room temperature; for operating temperature

Up to +100 °C: ≤ 300 m/s<sup>2</sup>

Up to +115 °C or +120 °C: ≤ 150 m/s<sup>2</sup>

# Electrical connection

## Pin layouts

### ECN 1313 pin layout

17-pin coupling or flange socket M23						12-pin PCB connector								
	Power supply					Incremental signals <sup>1)</sup>				Serial data transfer				
	7	1	10	4	11	15	16	12	13	14	17	8	9	
	12	1b	6a	4b	3a	/	2a	5b	4a	3b	6b	1a	2b	5a
	<b>U<sub>P</sub></b>	<b>Sensor</b> U <sub>P</sub>	<b>0V</b>	<b>Sensor</b> 0V	<b>Internal shield</b>	<b>A+</b>	<b>A-</b>	<b>B+</b>	<b>B-</b>	<b>DATA</b>	<b>DATA</b>	<b>CLOCK</b>	<b>CLOCK</b>	
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/ Black	Red/ Black	Gray	Pink	Violet	Yellow	

Other signals		
	5	6
	/	/
	/	/
	Brown <sup>2)</sup>	White <sup>2)</sup>

**Cable shield** connected to housing; **U<sub>P</sub>** = Power supply voltage; **T** = Temperature  
**Sensor:** The sensor line is connected in the encoder with the corresponding power line.  
 Vacant pins or wires must not be used.






- <sup>1)</sup> Only with ordering designations EnDat 01 and EnDat 02  
<sup>2)</sup> Only for cables inside the motor housing




### ECN 1325 pin layout

8-pin coupling or flange socket, M12					9-pin flange socket, M23					
16-pin PCB connector										
	Voltage supply				Serial data transfer				Other signals	
	8	2	5	1	3	4	7	6	/	/
	3	7	4	8	5	6	1	2	/	/
	1b	6a	4b	3a	6b	1a	2b	5a	8a	8b
	<b>U<sub>P</sub></b>	<b>Sensor</b> U <sub>P</sub>	<b>0V</b>	<b>Sensor</b> 0V	<b>DATA</b>	<b>DATA</b>	<b>CLOCK</b>	<b>CLOCK</b>	<b>T+</b>	<b>T-</b>
	Brown/ Green	Blue	White/ Green	White	Gray	Pink	Violet	Yellow	Brown	Green

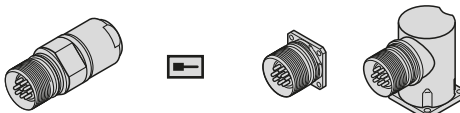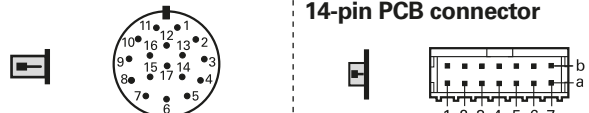**Cable shield** connected to housing  
**U<sub>P</sub>** = Power supply; **T** = Temperature  
**Sensor:** The sensor line is connected in the encoder with the corresponding power line.  
 Vacant pins or wires must not be used.

## ERN 1387 pin layout

17-pin coupling or flange socket M23						14-pin PCB connector					
											
Voltage supply					Incremental signals						
	<b>7</b>	<b>1</b>	<b>10</b>	<b>4</b>	<b>11</b>	<b>15</b>	<b>16</b>	<b>12</b>	<b>13</b>	<b>3</b>	<b>2</b>
	<b>1b</b>	<b>7a</b>	<b>5b</b>	<b>3a</b>	/	<b>6b</b>	<b>2a</b>	<b>3b</b>	<b>5a</b>	<b>4b</b>	<b>4a</b>
	<b>U<sub>P</sub></b>	<b>Sensor</b> U <sub>P</sub>	<b>0V</b>	<b>Sensor</b> 0V	<b>Internal shield</b>	<b>A+</b>	<b>A-</b>	<b>B+</b>	<b>B-</b>	<b>R+</b>	<b>R-</b>
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/Black	Red/Black	Red	Black


Other signals						
	<b>14</b>	<b>17</b>	<b>9</b>	<b>8</b>	<b>5</b>	<b>6</b>
	<b>7b</b>	<b>1a</b>	<b>2b</b>	<b>6a</b>	/	/
	<b>C+</b>	<b>C-</b>	<b>D+</b>	<b>D-</b>	<b>T+</b> <sup>1)</sup>	<b>T-</b> <sup>1)</sup>
	Gray	Pink	Yellow	Violet	Green	Brown

**Cable shield** connected to housing;

**U<sub>P</sub>** = Power supply; **T** = Temperature


**Sensor:** The sensor line is connected internally with the corresponding power line. Vacant pins or wires must not be used.

<sup>1)</sup> Only for cables inside the motor housing

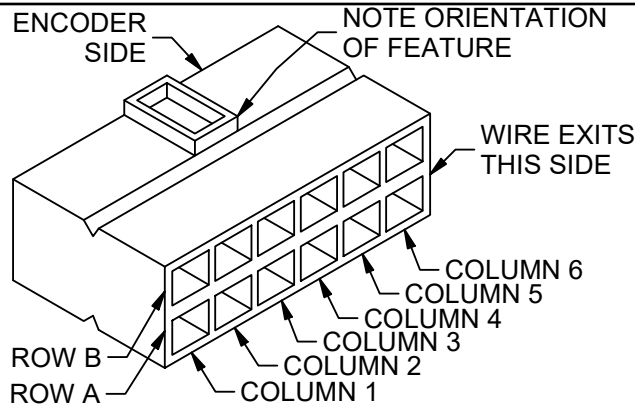


**291614-02 PLUG  
PIN-OUT DETAIL  
SCALE 4:1**

PIN LAYOUT			
RECT. PLUG PIN-OUT	WIRE COLOR	FUNCTION	ROUND PLUG PIN-OUT
1A	PINK	DATA -	17
2A	GREEN/BLACK	A+	15
3A	WHITE	SENSOR (V0)	4
4A	BLUE/BLACK	B+	12
5A	YELLOW	CLOCK -	9
6A	BLUE	SENSOR (Up)	1
1B	BROWN/GREEN	POWER (Up)	7
2B	PURPLE	CLOCK +	8
3B	RED/BLACK	B-	13
4B	WHITE/GREEN	ZERO V (V0)	10
5B	YELLOW/BLACK	A-	16
6B	GREY	DATA +	14

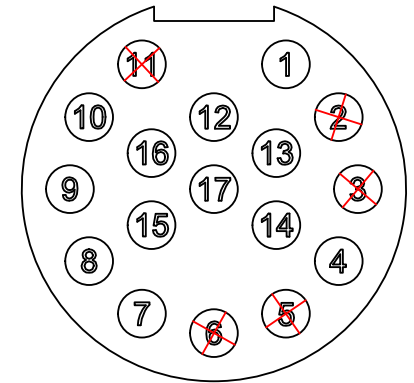

**291698-25 PLUG  
PIN-OUT VIEW  
NOT TO SCALE  
NOTE: NO PINS AT  
2, 3, 5, 6, OR 11**

**NOTES: HEIDENHAIN  
CABLE ASSEMBLY.  
REF. ID No. 730736-22**

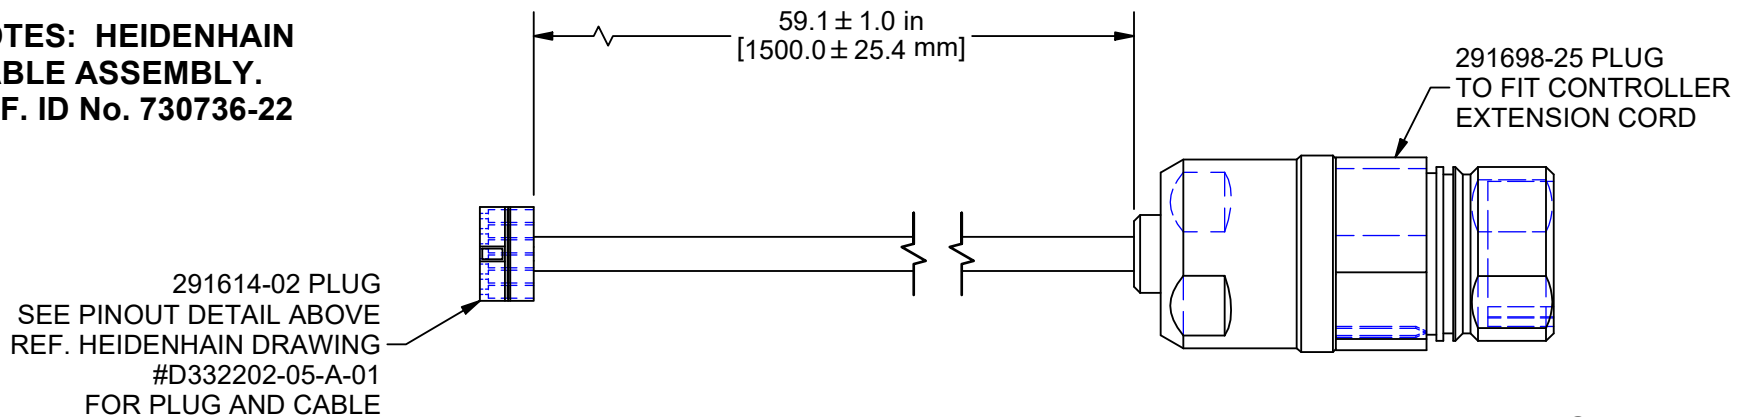

WEIGHT: 0.5 lbmass

		B	UPDATE & CLARIFY NOTES, ADD ROUND PLUG PIN-OUT & PIN VIEW, PUR #1502	LTL 6/16/21	<b>HOLLISTER-WHITNEY ELEVATOR CO. LLC</b>			
		A	PRODUCTION RELEASE, PUR #1103	LTL 6/26/19				
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.			THIRD ANGLE PROJECTION		DRAWN BY LTL	SCALE 1 : 1	MATERIAL AS PURCHASED, SEE NOTES	REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED
					SHEET SIZE A		DATE 4/30/2019	

Stiftsteckverbinder : SUB-D 15 pol.  
 Metallgehäuse mit Schirmanbindung  
 Gehäusebreite max 31 mm

Kabel : 4 x (2 x 0,14) + 2 x (0,5)  
 Geeignet für Energieführungsketten  
 Dauerbetriebstemperatur 80 Grad  
 Ölbeständig  
 Farbe orange RAL 2003




Buchsensteckverbinder : Metallgehäuse mit  
 Schirmanbindung, Kontaktbuchsen

Hersteller 1 : Intercontec  
 Typ : ASTA 035 FR 11 12 0005 000

Hersteller 2 : Interconnectron  
 Typ : SPN A 17B NN NN 169

Hersteller 3 : Coninvers  
 Typ : RC-17 S1N8A R300

## CABLE LENGTH UP TO 30 M

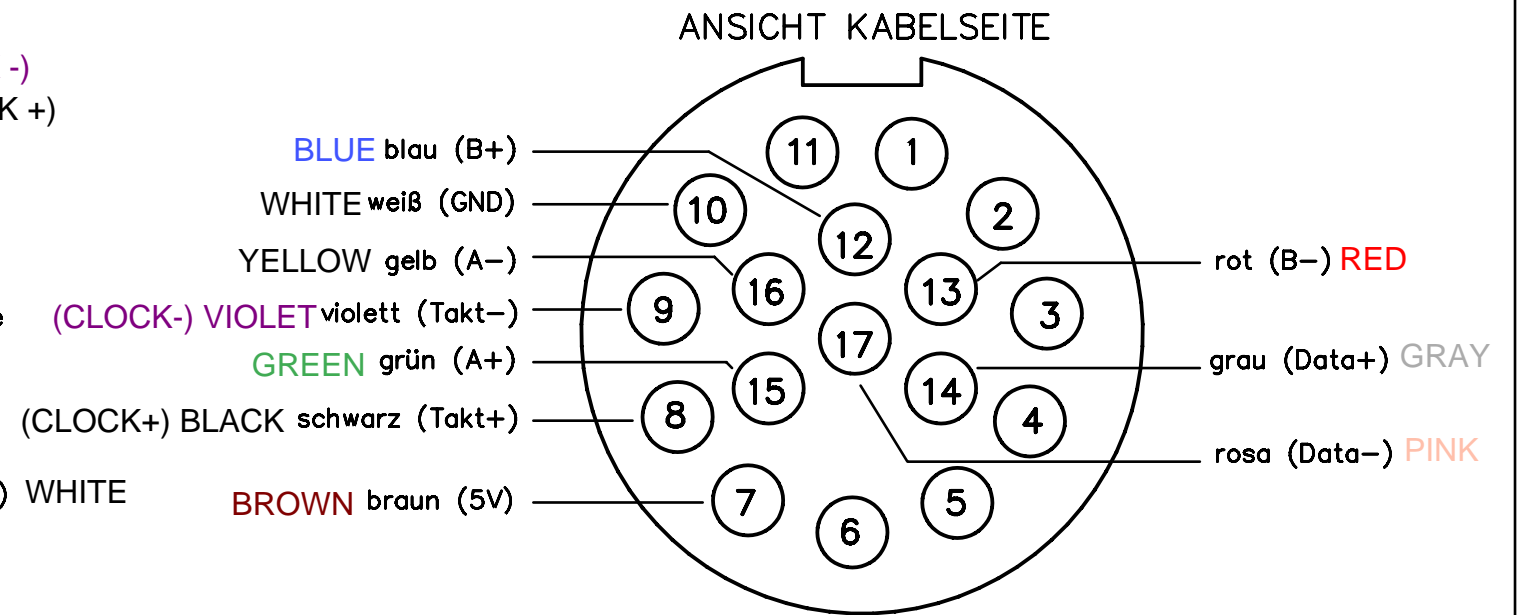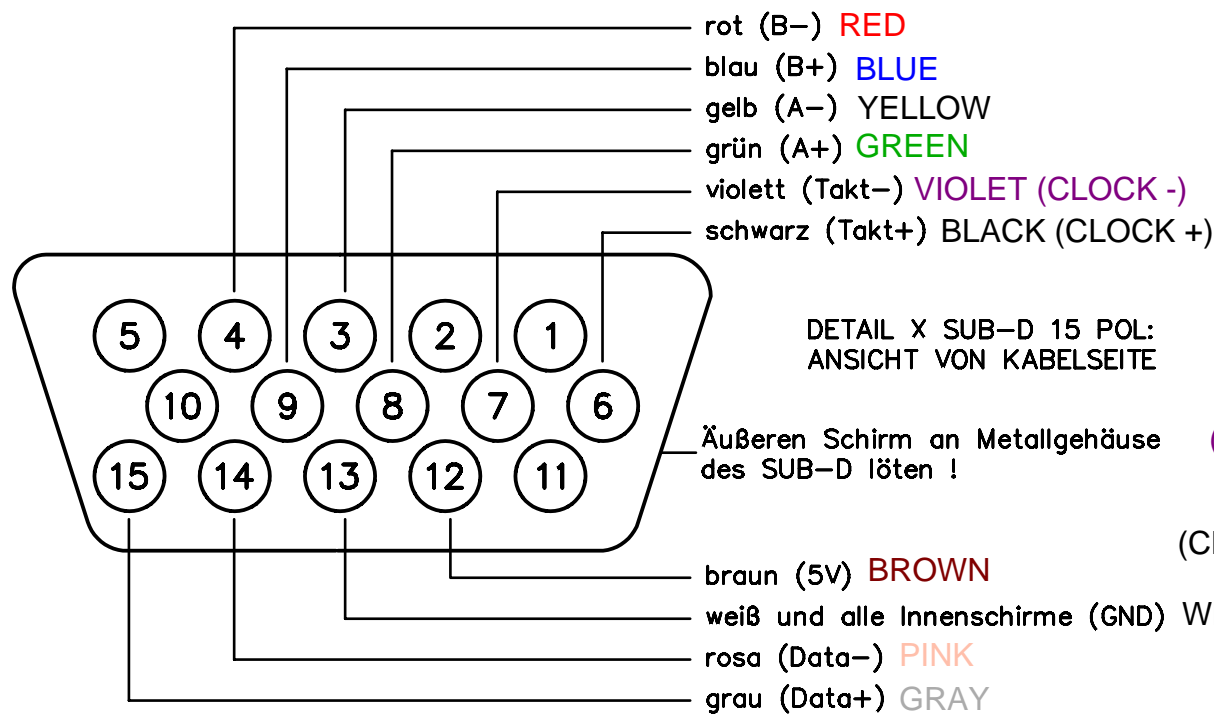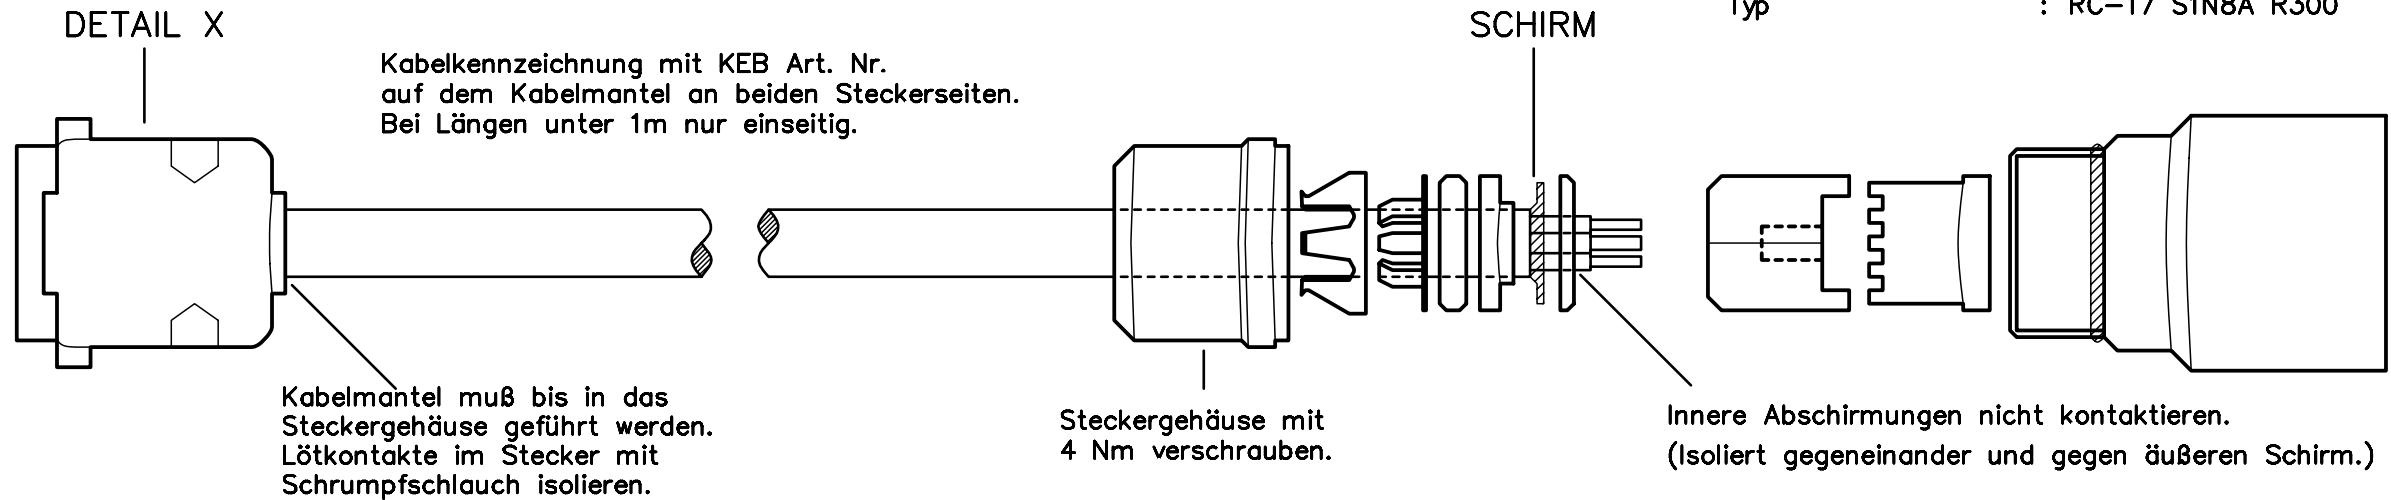

00.F5.0C1-4xPx KABELLAENGE x,x METER

00.F5.0C1-4xxx KABELLAENGE xxx METER

This drawing may not be duplicated nor retransmitted to others without our prior permission. Any improper use is forbidden.

Auto - CAD

Ohne unsere vorherige Zustimmung darf diese Zeichnung weder vervielfältigt, noch Dritten zugänglich gemacht werden, und sie darf durch Empfänger oder Dritte auch nicht in anderer Weise mißbräuchlich verwendet werden.

Änderungen : / Modifications	g				Rohmaß: / Rough size:	Ident-Nr.:	Menge: / Qty.:	ME	Werkstoff: / Material:	Rohteil-Nr.: / Blank-No.:	Benennung: / Title:	Kantenbruch / Break of sharp edges		
	f										Geberkabel F5			
	e										Zeichnungs-Nr.: / Drawing No.:	Datum	Name	✓ = √ Rz 100
	d					verzinkt, blau passiviert / Schichtdicke: zinc-plated, blue passivated / Thickness of coat:	µm	Schutzvermerk DIN 34 beachten Observe protection note DIN 34			00.F5.0C1-4005	gez.: 05.04.02	Horn	✓ = √ Rz 25
	c				Allgemeintoleranz DIN 6930-m general tolerance	Tolerierung ISO 8015 Tolerancing	Oberflächenangaben DIN ISO 1302 Surface details	Werkstückkanten DIN 6784 Workpiece edges			gepr.:			✓ = √ Rz 6,3
b											Format Size	Maßstab Scale	✓ = √ Rz 4	
a												1:1	geschliffen / ground	
Nr.:	Datum	Name	Paßmaß Size of fit	Abmaß Deviation	Keine Maße aus der Zeichnung abnehmen / Do not scale				Alle Maße in Millimeter / All dimensions in millimetres					<b>Karl E. Brinkmann GmbH</b> ANTRIEBSTECHNIK <b>D 32677 Barntrup</b>

Stiftsteckverbinder : SUB-D 15 pol.  
 Metallgehäuse mit Schirmanbindung  
 Gehäusebreite max 31 mm

Kabel : (4 x (2x0,25) + 2 x 1,0)  
 Geeignet für Energieführungsketten  
 Helukabel Topgeber 510 77750  
 Aderfarbkode nicht nach DIN 47100




Buchsensteckverbinder : Metallgehäuse mit  
 Schirmanbindung, Kontaktbuchsen

Hersteller 1 : Intercontec  
 Typ : ASTA 035 FR 11 12 0005 000

Hersteller 2 : Interconnectron  
 Typ : SPN A 17B NN NN 169

Hersteller 3 : Coninvers  
 Typ : RC-17 S1N8A R300

# CABLE LENGTH OVER 40 METERS

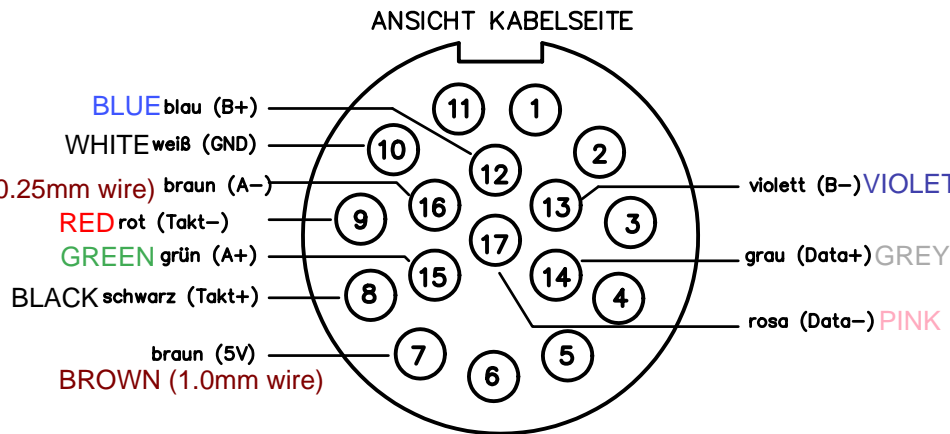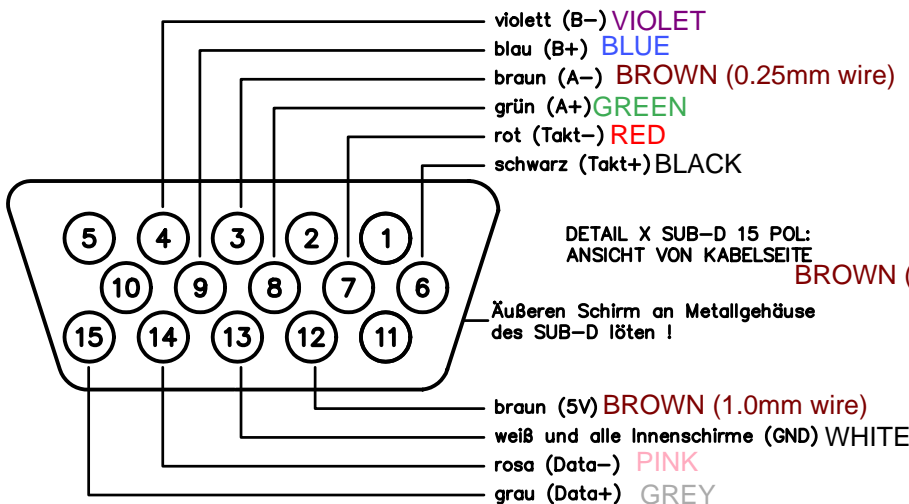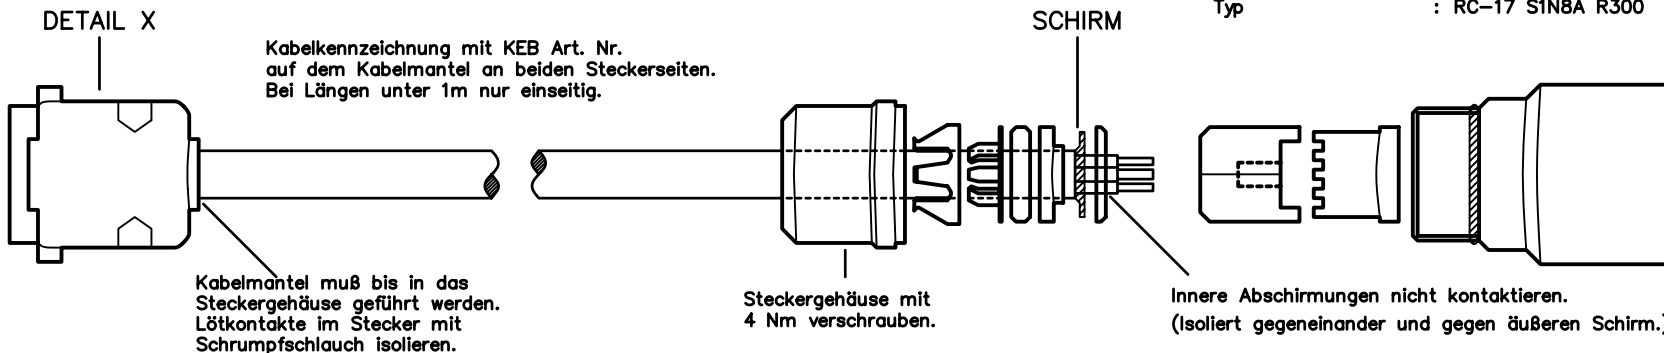

00.F5.0C1-LxPx KABELLAENGE x,x METER

00.F5.0C1-Lxxx KABELLAENGE xxx METER

This drawing may not be duplicated nor retransmitted to others without our prior permission. Any improper use is forbidden.

Ohne unsere vorherige Zustimmung darf diese Zeichnung weder vervielfältigt, noch Dritten zugänglich gemacht werden, und sie darf durch Empfänger oder Dritte auch nicht in anderer Weise mißbräuchlich verwendet werden.

Auto - CAD

Änderungen : / Modifications		g		Rohmaß: / Rough size	Ident-Nr.:	Menge: / Qty.:	ME	Werkstoff: / Material:	Rohteil-Nr.: / Blank-No.:	Benennung: / Title	Kantenbruch/Break of sharp edges	
		f		verzinkt, blau passiviert / Schichtdicke: zinc-plated, blue passivated / Thickness of coat:		µm		Schutzvermerk DIN 34 beachten Observe protection note DIN 34		Geberkabel F5		
		e		Allgemeintoleranz DIN 6930-m		Tolerierung ISO 8015		Oberflächenangaben DIN ISO 1302		Werkstückkanten DIN 6784		Zeichnungs-Nr.: / Drawing No.:
		d		general tolerance		Tolerancing		Surface details		Workpiece edges		00.F5.0C1-L005
		c		Keine Maße aus der Zeichnung abnehmen/Do not scale		Alle Maße in Millimeter/All dimensions in millimetres		Format Size		Maßstab Scale		gez.: 15.06.07
		b						Date		Name		x/ = √ Rz 100
		a						Date		Name		y/ = √ Rz 25
Nr.:		Datum		Name		Paßmaß Size of fit		Abmaß Deviation		1:1		geschliffen/ground Rz 4
										Karl E. Brinkmann GmbH D 32677 Bartrup		




# Hollister-Whitney Elevator Corporation

#1 Hollister-Whitney Parkway  
Quincy, IL 62305  
Phone: 217-222-0466

Fax: 217-222-0493  
e-mail: [info@hollisterwhitney.com](mailto:info@hollisterwhitney.com)  
[www.hollisterwhitney.com](http://www.hollisterwhitney.com)

## GERMAN

## ENGLISH

ROT  RED

BLAU  BLUE

GELB  YELLOW

GRÜN  GREEN

VIOLETT  VIOLET

SCHWARZ  BLACK

BRAUN  BROWN

WEIß  WHITE

ROSA  PINK

GRAU  GREY